

<div><div>ColorFit Pro 5 Max</div><div>Please refer to this manual before using the product</div></div>	<div><div>TABLE OF CONTENT</div><div><div><div>• What's in the Box</div><div>• Watch Overview</div><div>• Charge the Watch</div><div>• Turn the Watch On and Off</div><div>• Watch Navigation</div><div>•Button</div><div>•Home Screen Navigation</div><div>• Setup</div><div>•App Setup</div><div>•Pair the Watch</div><div>• Watch Features</div><div>• General Device Information and Tips</div><div>• Safety Information</div><div>• Medical Information</div><div>• Disposal Information</div><div>• Customer Support</div></div><div><div>01</div><div>02</div><div>03</div><div>04</div><div>05</div><div>06-13</div><div>14-15</div><div>16</div><div>17</div><div>18</div><div>19</div></div></div></div>	<div><div>WATCH OVERVIEW</div><div><div>• Noise Health</div><div>• Noise Buzz</div><div>• Clock</div><div>• Workouts</div><div>• Sports records</div><div>•Reminders</div><div>• Music</div><div>• Weather</div><div>• Watch faces</div><div>• Flashlight</div><div>• Calculator</div><div>• Settings</div></div></div>
---	--	---

<div><div>MUSIC</div><div>You can control songs and podcasts that play from your phone, right from your wrist as long as the watch is connected to the NoiseFit app on your phone.</div><div>WEATHER</div><div>Tap on the Weather app on your watch to see the weather of your current location.</div><div>WATCH FACES</div><div>Tap on 'Watch faces' to choose the background of your choice. You can also customise the watch face in the NoiseFit app.</div><div>FLASHLIGHT</div><div>You can use this feature to turn on the screen brightness and see your surroundings better. Go to the Flashlight. Tap to turn on.</div><div>CALCULATOR</div><div>You can use this feature to do basic calculations. You can also choose Always on to keep your display on all the time.</div></div>	<div><div>SETTINGS</div><div>Wrist awake</div><div>Select Wrist awake to turn on your screen when you raise your wrist.</div><div>Brightness</div><div>Tap on 'Brightness' to adjust the brightness of your device.</div><div>Screen timeout</div><div>Tap on screen timeout and set the duration as per your preference.</div><div>Always on display</div><div>Tap on 'Always on display' to quickly glance at the time. You can choose from multiple off-screen dials. You can even schedule a fixed activation time.</div><div>Do not disturb</div><div>Tap on 'Do not disturb' to turn it on or off. You can also choose to turn on Smart DND.</div><div>Ringtone &amp; Vibration</div><div>You can use this feature to choose vibration levels or turn off the vibration on your watch altogether.</div></div>	<div><div>Ultra power saving mode</div><div>Select Ultra power saving mode to save the battery on your smartwatch. This will turn off vibration, raise to wake and reduce the brightness.</div><div>Menu view</div><div>Tap on the Menu view and choose your preferred layout.</div><div>Auto sports detection</div><div>Go to Auto Sports Detection and turn it on or off.</div><div>Widget sorting</div><div>You can personalise the way you arrange your widgets with this feature.</div><div>Down button</div><div>Tap on the Down button &amp; choose for which feature you need a shortcut. You can customise the down button function as per your convenience.</div><div>About calls</div><div>You can update your ColorFit Pro 5 Max via the NoiseFit app. Go to 'My Profile' and select 'Check for updates.'</div></div>	<div><div>QR code</div><div>You can use this feature to access the QR code to download the NoiseFit app.</div><div>Reboot</div><div>You can choose this option to restart the watch.</div><div>Power Off</div><div>You can select this option to power-off the watch.</div><div>Reset</div><div>You can choose this option to reset the watch. Note - If you choose to reset, all your data and settings will be erased.</div></div>	<div><div>QUICK SETTINGS</div><div>You can swipe up from the watch's home screen to access the quick settings access.</div><div>SILENT MODE</div><div>FIND MY DEVICE</div><div>BRIGHTNESS</div><div>DND</div><div>POWER SAVING MODE</div><div>SETTINGS</div></div>	<div><div>DEVICE INFORMATION AND TIPS</div><div>DEVICE INFORMATION</div><div>The ColorFit Pro 5 Max smartwatch contains the following:</div><div>• SpO2 monitor</div><div>• Stress monitor</div><div>• IP68 waterproof</div><div>• 100+ sports modes</div><div>• 22mm quick change pins</div><div>The ColorFit Pro 5 Max smartwatch stores your activity data for up to 4 days in between the time you sync your watch to the NoiseFit app. Activity data includes your steps, distance, calories, active minutes, heart rate, sleep duration and workout data. We recommend syncing the watch to the app daily.</div><div>TIPS</div><div>How do I update my ColorFit Pro 5 Max?</div><div>You can update your ColorFit Pro 5 Max via the NoiseFit app. Go to 'My Profile' and select 'Check for updates.'</div></div>	<div><div>How do I find my watch's current firmware version?</div><div>You can find the watch's current firmware on the watch. Go to Settings on the NoiseFit app. Select Device information, choose Check for updates and update if any update is available.</div><div>How do I save battery?</div><div>Follow these simple steps to save ColorFit Pro 5 Max battery.</div><div>• Minimise the screen brightness</div><div>• Limit the notification you receive from the NoiseFit app.</div><div>• How does the watch estimate how many calories have been burned?</div><div>• ColorFit Pro 5 Max estimates how many calories you've burned based on the physical data you entered when you set up your account.</div><div>How do I change my activity goals?</div><div>You can do it through the NoiseFit app. Go to 'My Profile' Go to 'Setup' and select 'My Objectives.' Change your goals and confirm.</div></div>	<div><div>SAFETY AND HANDLING INSTRUCTIONS:</div><div>• The device includes an in-built rechargeable battery. The battery life may degrade near the end-of-life of the battery. Do not attempt to change the battery yourself in any event as you may end up damaging the device and/or the batteries posing a safety hazard on subsequent usage.</div><div>• Please do not tamper with the battery terminals as it may result in battery leakage, overheating, explosion or a fire hazard.</div><div>• Please do not pierce or disassemble the device as it may damage the battery causing the battery liquid to leak causing irritation to your skin if exposed to the liquid.</div><div>• Damaged battery may also be prone to overheating or causing a fire hazard.</div><div>• Do not place the device near fire or expose it to excessive heating as it may cause the battery to explode posing a safety hazard.</div><div>• Only use Noise approved chargers and cables that are specifically designed for use with the device. Unapproved chargers and cables may damage the device and also pose a safety hazard for the user.</div><div>• If the device emits a foul smell or burning odour, please stop using the device immediately and contact the Noise approved service centres.</div><div>• The device can be used in ambient temperature ranges of -20°C to 55°C. Using the device outside of the prescribed temperature range may damage the device. Do not use the device in a sauna or steam room.</div><div>• Do not use household cleaners to clean the device. Use soap-free cleaners instead.</div></div>	<div><div>• The device is dust and water resistant (rated at IP68). Following tips are to be followed for a safe upkeep of the device.</div><div>• Please make sure that the device is not exposed to sea water or used in deep waters.</div><div>• Do not expose the device to high pressure water flow.</div><div>• Wipe the device clean of water with soft and clean cloth if exposed to water.</div><div>• Leave the device to dry up naturally.</div><div>• Do not open the device if it stops functioning upon exposure to water and despite following the above steps. Visit an authorized service centre for getting the device checked.</div><div>MEDICAL DEVICE INTERFERENCE.</div><div>The device includes components that may cause interference when worn with medical devices like pacemakers, and other magnet-sensitive devices. In case you intend to use a medical device, please consult your physician before using the device. Also, in case the device is allowed to be worn with the medical devices by your physician, ensure sufficient separation between the device and the medical device during all times.</div><div>MEDICAL USE ADVISORY:</div><div>Unless otherwise specified, the device and any associated app-based or Noise provided services are not suitable to be used as medical devices. In particular, the device and associated app-based or Noise provided services are not intended to diagnose, treat, cure or prevent any disease/health condition. We develop products and services to track daily activity and wellness information as accurately as possible. The accuracy of devices is not intended to be equivalent to medical devices or scientific measurement devices.</div><div>HEARING LOSS:</div><div>Prolonged exposure to high volumes may result in permanent damage to hearing capability. While using the device, ensure that the sound levels are maintained at optimum level.</div></div>	<div><div>CHOKING HAZARD:</div><div>The device is not a toy and it contains small components that could cause a choking hazard. Do not use the device in a way that is not intended for use by or left unattended around small children or pets.</div><div>SKIN IRRITATION HAZARD:</div><div>In some cases, prolonged use of or exposure to the device may cause skin irritation or allergies in some users. To reduce the possibility of irritation, keep the device clean and dry. If you feel soreness, tingling, numbness, burning or stiffness on any part of your skin while or after using the watch, please immediately discontinue use.</div><div>DISPOSAL INFORMATION:</div><div>At Noise, we are committed towards protecting the environment and prevent any damage to the same by way of responsible disposal of e-waste generated from electronic devices. In our endeavour to collaboratively protect the environment, we urge our customers to help Noise to reduce the impact of e-waste on the environment. The following symbol is indicative that the device and/or any of the associated accessories (like USB cable, charger and the like) thereof should not be disposed with household/domestic waste. In accordance with the regulation of the Ministry of Environment, Forest and Climate Change, Noise has been granted Extended Producer Responsibility Authorisation (EPR Authorisation number: B-29016 (1910)/(EPR)/20/WM-III Division dated 04.03.2021) by the Central Pollution Control board. Accordingly, Noise is committed to contribute its bit towards protecting the environment by providing customers with the option of depositing their Noise devices, which have reached their end-of-life, at authorised e-waste collection centres. The details of our e-waste collection centres and our e-waste policy is available at the link: <a href="https://www.gonoise.com/pages/e-waste-management">https://www.gonoise.com/pages/e-waste-management</a>. By recycling, reusing materials or other forms of utilising old devices, you are making an important contribution to protecting our environment. Together we could make a difference!</div></div>	<div><div>CUSTOMER SUPPORT</div><div>If you experience any problem with the watch, it may be fixed by restarting your watch. For any assistance, please reach out to us at <a href="mailto:link.support.gonoise.com">link.support.gonoise.com</a></div></div>
--	---	---	--	--	--	--	---	---	---	---