

Noise Bud N1 Pro



Please refer to this manual before using the product

TABLE OF CONTENTS

• Package Contents and Features	01
• Specifications	02
• Power and Pairing	03
• Reset and Sizing	04
• Charging	05
• Controls	06
• Warranty	08
• Safety	09

PACKAGE CONTENTS



Noise Buds N1 Pro x 1



USB Type-C charging cable x 1



Charging case x 1



S X 1

L X 1

Ear-tips

User manual x 1

Thank you card x 1

SPECIFICATIONS

- Earbud weight: 3.9g (each)
- Speaker driver size: 11mm
- Supported profiles: A2DP/AVRCP/HFP/SPP/AVDTP
- Bluetooth version: 5.3
- Earbud charging time: Up to 120 minutes
- Working voltage: 5V
- Standby time: Up to 500 hours
- Playtime: Up to 7.5 hours at 60% volume
- Bluetooth range: 10m
- Working temperature: 0-45°C

CHARGING CASE SPECIFICATIONS

- Charging case weight: 39.2g
- Charging port: Type-C
- The number of earbud charges from the case: 7 times
- Case charging time: Up to 90 minutes
- Total playtime with charging case: Up to 60 hours

POWER ON

The earbuds will automatically turn on, on opening the charging case.


POWER OFF

The earbuds will automatically turn off once placed inside the charging case with the lid closed.

PAIRING

- Open the charging case.
- Turn on the Bluetooth of your device.
- Select 'Add Device' and select Noise Buds N1 Pro from the list of devices.
- Your Noise Buds N1 Pro are now paired with your device and ready to use.

Note: Your Noise Buds N1 Pro will automatically connect to the last paired device as soon as you take them out of the charging case.

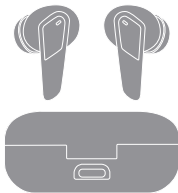

RESET

- Make sure your earbuds are fully charged.
- On your paired devices, delete/remove Noise Buds N1 Pro from the list of paired devices in the Bluetooth menu
- Take out the earbuds from the charging case
- Touch and hold either earbud for 10 seconds.
- The LED will blink white 3 times in both earbuds, indicating earbuds have been reset.
- Place the buds inside the charging case and repeat the pairing process.

CHOOSING YOUR EART-TIP SIZE

Earbuds are fitted with medium-sized tips. However, if you find that they don't fit perfectly, please remove them and try the small and large ear tips.

Follow the images and chart to learn how to wear earbuds in the right manner.



CHARGING

Earbuds

Place both earbuds inside the charging case to charge them.

Indication (on case)

- Solid White LED = Charging



Charging

Case

Charge the case via the supplied Type-C charging cable, preferably from any PC or laptop as compared to a USB charger.

Indication (on case)

- Blinking white LED = Charging



Charging

- No LED = Fully Charged



Fully Charged

CONTROLS



Play/Pause

Tap either earbud twice



Tap twice



Tap twice



Previous Song

Tap the left earbud thrice



Tap thrice



Next Song

Tap the right earbud thrice



Tap thrice



Volume Up

Tap the right earbud once



Tap once



Volume Down

Tap the left earbud once



Tap once



Answer Call

Tap either earbud twice



Tap twice



Tap twice



End Call

Tap either earbud twice



Tap twice



Tap twice



Reject Call

Touch and hold either earbud for 2 seconds



Touch and hold



Touch and hold



Voice Assistant

Tap either earbud four times



Tap 4 times



Tap 4 times



Gaming Mode

Touch and hold left earbud for 2 seconds



Touch and hold



Mode Switching (ANC/Transparency/Normal)

Touch and hold right earbud for 2 seconds



Touch and hold

WARRANTY

The warranty covers your Noise product, including accessories, against manufacturing defects (if any) for 1 year from the date of purchase.

Things that are not covered in the warranty are listed below:

- Unauthorised tampering, modifications or repairs of the product.
- Physical damage of the product on the account of abuse, handling, storage, installation or testing including any use that is not by the product manual or documentation or any other instruction provided along with the Noise product.

For further information on product replacement/refund-related queries, please refer to the terms and conditions mentioned in our online return policy section on www.gonoise.com.

REGISTER YOUR WARRANTY

www.gonoise.com/pages/warranty-registration

✓ SUPPORT AND SERVICE

🕒 1 YEAR LIMITED WARRANTY



SCAN ME

CUSTOMER QUERY

For any assistance, please reach out to us at support.gonoise.in



SAFETY FOR YOU AND YOUR NOISE BUDS

Follow these tips to get the best out of your new Noise Buds:



Do not expose the earbuds to liquids, moisture, or humidity as they have electronics and batteries inside.



Do not try to disassemble your earbuds. There are no user-serviceable parts inside it.



Do not use abrasive cleaning solvents to clean your new earbuds. Wipe them down with a slightly damp cloth if and when necessary.



Try not to drop the earbuds and keep them away from sharp objects such as keys in your pockets.



Remove and clean the earbud tips regularly to ensure that you always enjoy the best sound possible.



Only charge your earbuds from 5V USB ports such as phone chargers and laptops or PC chargers.



Do not expose the earbuds to extremely high or low temperatures as this may damage the battery or even deform the plastic parts.



Never listen to music at a high volume or you may permanently damage your hearing.



Do not throw the earbuds in a fire to dispose them. The internal battery may explode.



Pay attention to your surroundings and never wear any earphones while riding, driving, or walking in traffic.

