

SAMSUNG

Simple User Guide



AH81-17428-J-01

HW-S80*D / HW-S70*D



You can access the User guide on Samsung's on-line customer support center by scanning the QR code on the left. To see the manual on your PC or mobile device, download the manual in document format from Samsung's website. (<http://www.samsung.com/support>)

© 2024 Samsung Electronics Co., Ltd. All rights reserved.

Contact **SAMSUNG WORLD WIDE**

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care Centre.

Country/Region	Samsung Service Centre	Web Site
UK	0333 000 0333	www.samsung.com/uk/support
IRELAND (EIRE)	0818 717100	www.samsung.com/ie/support
GERMANY	06196 77 555 77	www.samsung.com/de/support
FRANCE	01 48 63 00 00	www.samsung.com/fr/support
ITALIA	800-SAMSUNG (800.7267864)	www.samsung.com/it/support
SPAIN	91 175 00 15	www.samsung.com/es/support
PORTUGAL	210 408 098 Chamada para a rede fixa nacional Das 09:00 às 19:30h	www.samsung.com/pt/support
LUXEMBURG	261 03 710	www.samsung.com/be_fr/support
NETHERLANDS	088 90 90 100	www.samsung.com/nl/support
BELGIUM	02-201-24-18	www.samsung.com/be_fr/support (Dutch)
NORWAY	21629099	www.samsung.com/no/support
DENMARK	70 70 19 70	www.samsung.com/dk/support
FINLAND	0300-622 75 15	www.samsung.com/fi/support
SWEDEN	0771-400 300	www.samsung.com/se/support
POLAND	801-172-678* * (opłata według taryfy operatora)	http://www.samsung.com/pl/support/
HUNGARY	06805SAMSUNG (0680-7267864)	www.samsung.com/hu/support
AUSTRIA	0800 72 67 864 (0800-SAMSUNG)	www.samsung.com/at/support
SWITZERLAND	0800 726 786	www.samsung.com/ch_fr/support (German)
SWITZERLAND	0800 726 786	www.samsung.com/ch_fr/support (French)
CZECH	800 - SAMSUNG (800-726786)	www.samsung.com/cz/support

Country/Region	Samsung Service Centre	Web Site
SLOVAKIA	0800 - SAMSUNG (0800-726 786)	www.samsung.com/sk/support
CROATIA	072 726 786	www.samsung.com/hr/support
BOSNIA	055 233 999	www.samsung.com/ba/support
North Macedonia	023 207 777	www.samsung.com/mk/support
MONTENEGRO	020 405 888	www.samsung.com/support
SLOVENIA	080 697 267 (brezplačno številka)	www.samsung.com/si/support
SERBIA	011 321 6899	www.samsung.com/rs/support
Kosovo	038 40 30 90	www.samsung.com/support
ALBANIA	045 620 202	www.samsung.com/al/support
BULGARIA	080011131 - Безплатен за всички оператори *3000 - Цена на един градски разговор или списък на мобилния оператор 09:00 до 18:00 - Понеделник до Петък	www.samsung.com/bg/support
ROMANIA	0800802678 - Apel gratuit *8000 - Apel tarifat în rețea Luni - Vineri: 9 AM - 6 PM	www.samsung.com/ro/support
CYPRUS	8009 4000 only from landline, toll free	www.samsung.com/gr/support
GREECE	80111 SAMSUNG (80111 726 7864) from mobile and land line (+30) 210 687691 from mobile and land line	www.samsung.com/gr/support
LITHUANIA	8-800-77777	www.samsung.com/lt/support
LATVIA	8000-7267	www.samsung.com/lv/support
ESTONIA	800-7267	www.samsung.com/ee/support

06 TROUBLESHOOTING



Before seeking assistance, check the following.

Soundbar does not turn on.



- Check whether the power cord of the Soundbar is correctly inserted into the outlet.

If the subwoofer does not connect automatically

- Turn off the Soundbar main.
- Press and hold **ID SET** on the rear of the subwoofer for at least 5 seconds.

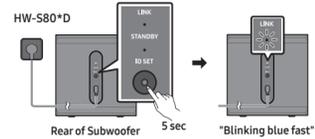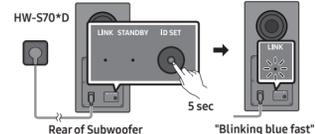

- Press the **Up** button on the remote control for 5 seconds.



- Check if the LINK LED is solid blue (connection complete).
 - The LINK LED indicator stops blinking and glows a solid blue when a connection is established between the Soundbar and the Wireless Subwoofer.

SAFETY INFORMATION

SAFETY WARNINGS

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK). NO USER-SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. Refer to the table below for an explanation of symbols which may be on your Samsung product.

Symbol	CAUTION RISK OF ELECTRIC SHOCK. DO NOT OPEN.
	This symbol indicates that high voltage is present inside. It is dangerous to make any kind of contact with any internal part of this product.
	This symbol indicates that this product has included important literature concerning operation and maintenance. Class II product : This symbol indicates that a safety connection to electrical earth (ground) is not required. If this symbol is not present on a product with a power cord, the product MUST have a reliable connection to protective earth (ground).
	AC voltage : Rated voltage marked with this symbol is AC voltage.
	DC voltage : Rated voltage marked with this symbol is DC voltage.
	Caution. Consult instructions for use : This symbol instructs the user to consult the user manual for further safety related information.

WARNING

- To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.
- Do not use liquid fumigators containing chemicals, such as mosquito repellent or air freshener, around the product. If steam comes in contact with the product surface or enters the product, it may cause stains or malfunction.

CAUTION

- TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.
- This apparatus shall always be connected to a AC outlet with a protective grounding connection.
- To disconnect the apparatus from the mains, the plug must be pulled out from the mains socket, therefore the mains plug shall be readily operable.
- Do not expose this apparatus to dripping or splashing. Do not put objects filled with liquids, such as vases, on the apparatus.

- To turn this apparatus off completely, you must pull the power plug out of the wall socket. Consequently, the power plug must be easily and readily accessible at all times

PRECAUTIONS

- Ensure that the AC power supply in your house complies with the power requirements listed on the identification sticker located on the bottom of your product. Install your product horizontally, on a suitable base (furniture), with enough space around it for ventilation (7-10 cm). Make sure the ventilation slots are not covered. Do not place the unit on amplifiers or other equipment which may become hot. This unit is designed for continuous use.
To fully turn off the unit, disconnect the AC plug from the wall outlet. Unplug the unit if you intend to leave it unused for a long period of time.
- During thunderstorms, disconnect the AC plug from the wall outlet. Voltage peaks due to lightning could damage the unit.
- Do not expose the unit to direct sunlight or other heat sources. This could lead to overheating and cause the unit to malfunction.
- Protect the product from moisture (i.e. vases), and excess heat (e.g. a fireplace) or equipment creating strong magnetic or electric fields. Unplug the power cable from the AC wall socket if the unit malfunctions. Your product is not intended for industrial use. It is for personal use only. Condensation may occur if your product has been stored in cold temperatures. If transporting the unit during the winter, wait approximately 2 hours until the unit has reached room temperature before using.
- The battery used with this product contains chemicals that are harmful to the environment. Do not dispose of the battery in the general household trash. Do not expose the battery to excess heat, direct sunlight, or fire. Do not short circuit, disassemble, or overheat the battery. CAUTION : Danger of explosion if the battery is replaced incorrectly. Replace only with the same or equivalent type.
- Make sure to rest the AC/DC Adapter flat on a table or the floor. If you place the AC/DC Adapter so that it is hanging with the AC cord input facing upwards, water or other foreign substances could enter the Adapter and cause the Adapter to malfunction.

01 CHECKING THE COMPONENTS


- Soundbar Main Unit
- Soundbar Remote Control
- Subwoofer
- Power Cord X 2 (Subwoofer, Soundbar)
- AC/DC Adapter
- HDMI to Micro HDMI Cable
- Wall Mount Guide
- Holder-Screw X 2
- Screw (M5 X L55) X 4
- Screw Anchor X 4
- Bracket-Wall Mount X 2

NOTE

- For more information about the power supply and power consumption, refer to the label attached to the product. (Label: Bottom of the Soundbar Main Unit)
- To purchase additional components or optional cables, contact a Samsung Service Center or Samsung Customer Care.

02 PRODUCT OVERVIEW

Top Panel of the Soundbar

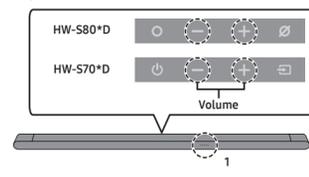

- (Multi Function) Button**
In standby mode, press the **(Multi Function)** button to turn on the Soundbar. Press the **(Multi Function)** button to change the mode.
- (Mic On/Off) Button**
Press the button to turn the microphone on or off. When the microphone is off, the LED indicator will light red.
- LED Indicator**
The LED indicator flashes, glows, or changes color depending on the Soundbar's current mode or status.
- (Power) Button**
Turns the power on and off.
- (Source) Button**
Press the **(Source)** button to change the input source.

- To switch to Bluetooth Pairing state in "Bluetooth" mode, press and hold the **(Mic On/Off)** or **(Source)** button on the top of the Soundbar for more than 5 seconds.

Rear Panel of the Soundbar





- SERVICE**
Connect a USB storage device to upgrade the product's software.
- HDMI (eARC)**
Connect to the HDMI jack on a TV.
- DC19V**
Connect the AC/DC power adapter. (Power Supply in)

03 CONNECTING THE SOUNDBAR

Connecting the power and units

Rear of Subwoofer

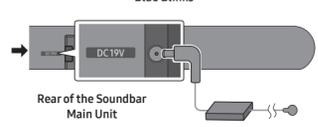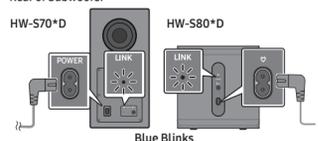

- The LINK LED indicator stops blinking and glows a solid blue when a connection is established between the Soundbar and the Wireless Subwoofer.

07 IMPORTANT NOTES ABOUT SERVICE

- Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance.
- An administration fee may be charged if either (a) an engineer is called out at your request and there is no defect with the product (i.e. where the user manual has not been read), (b) you bring the unit to a repair centre and there is no defect with the product (i.e. where the user manual has not been read).
- You will be informed of the administration fee amount before a technician visits.

08 SPECIFICATIONS AND GUIDE

Model Name : HW-S80*D
Weight : 1.4 kg
Dimensions (W x H x D) : 1160.0 x 38.0 x 39.9 mm
AMPLIFIER Rated Output power : 130 W
Subwoofer PS-WS800D (HW-S800D), PS-WS801D (HW-S801D)
<ul style="list-style-type: none"> Weight : 6.4 kg Dimensions (W x H x D) : 238.0 x 240.8 x 238.0 mm AMPLIFIER Rated Output power : 200 W
Model Name : HW-S70*D
Weight : 1 kg
Dimensions (W x H x D) : 890.0 x 38.0 x 39.9 mm
AMPLIFIER Rated Output power : 90 W
Subwoofer PS-WS705D (HW-S700D), PS-WS706D (HW-S701D)
<ul style="list-style-type: none"> Weight : 6 kg Dimensions (W x H x D) : 205.0 x 353.0 x 302.0 mm AMPLIFIER Rated Output power : 160 W

Operating Temperature Range : +10 °C to +40 °C
Operating Humidity Range : 10 % to 80 %, non-condensing
Storage Temperature Range : -20 °C to +45 °C
Storage Humidity Range : 5 % to 95 %, non-condensing
Supported play formats Dolby 5.1ch / Dolby Digital Plus / Dolby TRUE HD / Dolby ATMOS / DTS 5.1ch / LPCM 8ch

NOTE

- Samsung Electronics Co., Ltd reserves the right to change the specifications without notice.
- Weight and dimensions are approximate.

Precaution : The Soundbar will restart automatically if you turn on/turn off Wi-Fi or Bluetooth.

Overall Standby Power Consumption (W)

2.0 W

To deactivate Wi-Fi connection:

Press and hold the **CH LEVEL** button on the remote control of the Soundbar for more than 30 seconds to turn on or off the Wi-Fi connection.


To deactivate Bluetooth connection:

Press and hold the **TONE CONTROL** button on the remote control of the Soundbar for more than 30 seconds to turn on or off the Bluetooth connection.

- Hereby, Samsung declares that this radio equipment is in compliance with Directive 2014/53/EU and the relevant UK statutory requirements. The full text of the declaration of conformity is available at the following internet address: <http://www.samsung.com> go to Support and enter the model name. This equipment may be operated in all EU countries and in the UK. The 5GHz WLAN(Wi-Fi or SRD) function of this equipment may only be operated indoors.
- WIRELESS DEVICE OUTPUT POWER**
RF max transmitter power : 100mW at 2.4GHz-2.4835GHz, 200mW at 5.15GHz-5.25GHz & 5.47GHz - 5.725GHz, 100mW at 5.25GHz-5.35GHz, 25mW at 5.725GHz - 5.875GHz

04 USING A WIRED CONNECTION

Connecting using an HDMI to Micro HDMI Cable



NOTE

- When using an HDMI to Micro HDMI cable, take caution not to break the cable terminal.
- When the TV sound is not output, press the **(Multi Function)** / **(Source)** button at the top of the Soundbar or the **(Source)** button on the remote control to select the "TV ARC" mode.
- The recommended cable is an HDMI cable certified by HDMI.org.



Using the Q-Symphony Function

When the Soundbar connects to a Samsung TV that supports the Q-Symphony function, you can play the sound simultaneously through the Soundbar and the TV. If you use the Q-Symphony function, the surround sound played on the TV allows you to enjoy a richer, more three-dimensional surround sound effect.


When the Soundbar is connected, "Q-symphony" menu appears on the TV. (The message displayed may differ with the TV model.)
(Settings) → All Settings → Sound → Sound Output

05 USING A WIRELESS CONNECTION

Connecting via Bluetooth

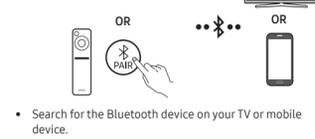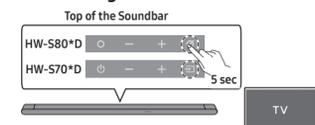

- Search for the Bluetooth device on your TV or mobile device.

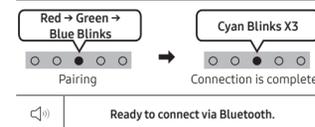

NOTE

- If asked for a PIN code when connecting a Bluetooth device, enter **<0000>**.

Connecting via Wi-Fi (Wireless Networking)

- To connect a Soundbar to a mobile device via a wireless network (Wi-Fi), the **SmartThings** app is required.
- Connect your mobile device (smartphone, tablet, etc.) to the Wi-Fi network the TV is connected to.
 - Install and launch the **SmartThings** app on your mobile device (smartphone, tablet, etc.).
 - Follow the instructions in the app screen on the mobile device to connect the Soundbar to your Wi-Fi network.



[ENERGY STAR] ENERGY STAR qualified model only
Your Samsung product is ENERGY STAR qualified in its factory default setting. Change to certain features, settings and functionality in this product can change the power consumption, possibly beyond the limits required for ENERGY STAR qualification.
Environmental Protection Agency and Department of Energy. ENERGY STAR is a joint program of the Government agencies, designed to promote energy efficient products and practices.
Refer to www.energystar.gov for more information of the ENERGY STAR Program.


ENERGY STAR qualified model only (The other models)
As an ENERGY STAR Partner, Samsung has determined that this product or product models meets the ENERGY STAR guideline for energy efficiency.



[Correct disposal of batteries in this product]


(Applicable in countries with separate collection systems)
The marking on the battery, manual or packaging indicates that the battery in this product should not be disposed of with other household waste. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. The battery incorporated in this product is not user replaceable. For information on its replacement, please contact your service provider. Do not attempt to remove the battery or dispose it in a fire. Do not disassemble, crush, or puncture the battery. If you intend to discard the product, the waste collection site will take the appropriate measures for the recycling and treatment of the product, including the battery.

- Removing the battery**
- To remove the battery, contact an authorised service centre. To obtain battery removal instructions, please visit www.samsung.com/global/ecodesign_energy.
- For your safety, you must not attempt to remove the battery. If the battery is not properly removed, it may lead to damage to the battery and device, cause personal injury, and/or result in the device being unsafe.



[Correct disposal of batteries in this product]

(Applicable in countries with separate collection systems)
This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment. To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.



[Correct disposal of this Product (Waste Electrical & Electronic Equipment)]

(Applicable in countries with separate collection systems)
This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

For information on Samsung's environmental commitments and product specific regulatory obligations e.g. REACH, WEEE, Batteries, visit: www.samsung.com/uk/aboutsamsung/sustainability/environment/our-commitment/data/

COMMISSION REGULATION (EU) 2019/1782
Ecodesign requirements for external power supplies : www.samsung.com/global/ecodesign_component

SAMSUNG

Einfaches Benutzerhandbuch



AH81-17428J-01

HW-S80*D / HW-S70*D

Sie können im Online-Kundensupportcenter von Samsung auf das Benutzerhandbuch zugreifen, indem Sie den QR-Code auf der linken Seite scannen.
Wenn Sie das Handbuch auf Ihrem PC oder Mobilgerät anzeigen möchten, laden Sie es im Dokumentformat von der Samsung-Webseite herunter: (<http://www.samsung.com/support>)

© 2024 Samsung Electronics Co., Ltd. Alle Rechte vorbehalten.

Kontakt zu SAMSUNG WORLD WIDE

Falls Sie Fragen oder Anregungen zu Samsung-Produkten haben, wenden Sie sich bitte an ein SAMSUNG-Kundenzentrum.

Land/Region	Samsung-Servicezentrum	Website
UK	0333 000 0333	www.samsung.com/uk/support
IRELAND (EIRE)	0818 717100	www.samsung.com/ie/support
GERMANY	06196 77 555 77	www.samsung.com/de/support
FRANCE	01 48 63 00 00	www.samsung.com/fr/support
ITALIA	800-SAMSUNG (800 7267864)	www.samsung.com/it/support
SPAIN	91 175 00 15	www.samsung.com/es/support
PORTUGAL	210 698 098 Chamada para a rede fixa nacional Das ölets das 9h às 20h	www.samsung.com/pt/support
LUXEMBURG	261 03 710	www.samsung.com/be_fr/support
NETHERLANDS	088 90 90 100	www.samsung.com/nl/support
BELGIUM	02-201-24-18	www.samsung.com/be_fr/support (Dutch) www.samsung.com/be_fr/support (French)
NORWAY	21629099	www.samsung.com/no/support
DENMARK	70 7019 70	www.samsung.com/dk/support
FINLAND	030-622 75 15	www.samsung.com/fi/support
SWEDEN	0771-400 300	www.samsung.com/se/support
POLAND	801 172 478* * (opłata za wywołanie taryfy operatora)	http://www.samsung.com/pl/support/
HUNGARY	0680SAMSUNG (0680-726-7864)	www.samsung.com/hu/support
AUSTRIA	0800 72 47 864 (0800-SAMSUNG)	www.samsung.com/at/support
SWITZERLAND	0800 726 786	www.samsung.com/ch_fr/support (German) www.samsung.com/ch_fr/support (French)
CZECH	800 - SAMSUNG (800-726786)	www.samsung.com/cz/support

06 FEHLERBEHEBUNG



Überprüfen Sie Folgendes, bevor Sie den Kundendienst informieren.

Die Soundbar lässt sich nicht einschalten.



- Überprüfen Sie, ob das Stromkabel der Soundbar korrekt in die Steckdose eingesteckt ist.

Falls der Subwoofer nicht automatisch eine Verbindung herstellt

- Schalten Sie das Soundbar-Hauptgerät aus.
- Halten Sie **ID SET** auf der Rückseite des Subwoofers mindestens 5 Sekunden lang gedrückt.

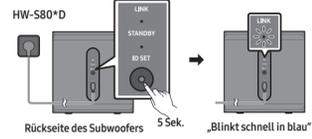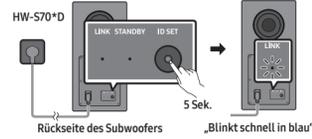

- Drücken Sie die Taste **Oben** auf der Fernbedienung 5 Sekunden lang.



- Prüfen Sie, ob die **LINK-LED** dauerhaft blau leuchtet (Verbindung abgeschlossen).
 - Die LED-Verbindungsanzeige **LINK** hört auf zu blinken und leuchtet dauerhaft blau, wenn eine Verbindung zwischen der Soundbar und dem drahtlosen Subwoofer hergestellt ist.

SICHERHEITSINFORMATION

SICHERHEITSWARNUNGEN

UM DAS RISIKO EINES STROMSCHLAGS ZU VERRINGERN, DÜRFEN SIE DIE ABDECKUNG (ODER RÜCKSEITE) NICHT ÖFFNEN. ES BEFINDEN SICH IM INNEREN KEINE TEILE, DIE VON BENUTZERN GEWARTET WERDEN KÖNNEN. WARTUNGSARBEITEN SIND QUALIFIZIERTEM FACHPERSONAL ZU ÜBERLASSEN. In der nachstehenden Tabelle finden Sie eine Erklärung zu Symbolen, die sich möglicherweise auf Ihrem Samsung-Produkt befinden.

	VORSICHT GEFAHR DURCH STROMSCHLAG. NICHT ÖFFNEN.	
	Dieses Symbol zeigt an, dass im Inneren Hochspannung vorhanden ist. Es ist gefährlich, Teile im Inneren dieses Bildschirms zu berühren.	
	Dieses Symbol weist darauf hin, dass diesem Gerät wichtige Anweisungen zum Betrieb und zur Wartung beigefügt sind.	
	Produkt der Klasse II: Dieses Symbol zeigt an, dass das Gerät einen elektrischen Erdungsanschluss (Masse) nicht benötigt. Wenn dieses Symbol bei einem Produkt mit Netzkabel nicht vorhanden ist, MUSS das Produkt zuverlässig mit einem Schutzleiter (Erde) verbunden sein.	
	Wechselspannung: Bei einer mit diesem Symbol gekennzeichneten Nennspannung handelt es sich um eine Wechselspannung.	
	Gleichspannung: Bei einer mit diesem Symbol gekennzeichneten Nennspannung handelt es sich um eine Gleichspannung.	
	Vorsicht: Gebrauchsanweisung beachten: Dieses Symbol weist den Benutzer an, weitere sicherheitsrelevante Informationen dem User Manual (Benutzerhandbuch) zu entnehmen.	

WARNUNG

- Setzen Sie dieses Gerät zur Verringerung des Risikos eines Feuers oder eines elektrischen Schlags keinem Regen und keiner Feuchtigkeit aus.
- Verwenden Sie es am Produkt herum keine flüssigen Begabungsmittel, die Chemikalien enthalten, wie Mückenschutzmittel oder Lufterfrischer. Wenn Dampf mit der Oberfläche des Geräts in Berührung kommt oder in das Gerät eindringt, kann er Flecken oder Fehlfunktionen verursachen.

VORSICHT

- ZUR VERMEIDUNG EINES ELEKTRISCHEN SCHLAGS DEN BREITEN STROMKONTAKT DES STECKERs IN DEN BREITEN STECKPLATZ STECKEN, VOLLSTÄNDIG EINFÜHREN.
- Dieses Gerät muss immer an einer Wechselstromquelle mit einer Schutzerdung angeschlossen sein.
- Wenn Sie das Gerät vom Stromnetz trennen möchten, muss der Stecker aus der Steckdose gezogen werden. Der Stecker sollte dafür leicht zugänglich sein.

- Schützen Sie das Gerät vor Wassertropfen und Spritzwasser. Stellen Sie keine mit Flüssigkeiten gefüllten Objekte, z. B. Vasen, auf das Gerät.
- Wenn Sie dieses Gerät komplett ausschalten möchten, müssen Sie das Netzkabel aus der Steckdose ziehen. Der Stecker muss deshalb jederzeit leicht zugänglich sein.

VORSICHTSMAßNAHMEN

- Stellen Sie sicher, dass die Wechselstromversorgung in Ihrem Haushalt den auf dem Etikett auf der Unterseite des Geräts angegebenen Anforderungen entspricht. Platzieren Sie das Gerät in waagerechter Position auf einem geeigneten Untergrund (Möbelstück). Achten Sie dabei auf genügend Platz rund um das Gerät (ca. 7 bis 10 cm), um eine ausreichende Belüftung zu gewährleisten. Achten Sie darauf, dass die Belüftungsschlitze frei bleiben. Platzieren Sie das Gerät nicht auf Verstärkern oder sonstiger Ausrüstung, die heiß werden kann. Dieses Gerät ist für den Dauerbetrieb bestimmt. Um das Gerät vollständig auszuschalten, ziehen Sie den Netzstecker aus der Steckdose. Trennen Sie die Einheit vom Strom, wenn Sie es längere Zeit nicht verwenden möchten.
- Ziehen Sie die Gewitter den Netzstecker aus der Steckdose. Spannungsspitzen aufgrund von Blitzen können die Einheit beschädigen.
- Setzen Sie das Gerät keiner direkten Sonneneinstrahlung oder sonstigen Wärmequellen aus. Anderenfalls kann es zu Überhitzung und Fehlfunktionen des Geräts kommen.
- Schützen Sie das Produkt vor Feuchtigkeit (z. B. Vasen) und übermäßiger Wärme (z. B. Kamin) oder vor Geräten, die ein starkes magnetisches oder elektrisches Feld erzeugen. Trennen Sie das Stromkabel von der Netzsteckdose, wenn Fehlfunktionen des Geräts auftreten. Das Gerät ist nicht für die gewerbliche Nutzung bestimmt. Es darf ausschließlich privat genutzt werden. Wenn Sie das Gerät kalten Temperaturen ausgesetzt haben, kann sich Kondenswasser bilden. Wenn Sie das Gerät im Winter transportieren, warten Sie etwa 2 Stunden, bis das Gerät Zimmertemperatur erreicht hat, bevor Sie es verwenden.

- In diesem Produkt verwendete Batterie enthält Chemikalien, die Schädlich für die Umwelt sind. Entsorgen Sie die Batterie nicht im allgemeinen Hausmüll. Setzen Sie die Batterie keiner übermäßigen Wärme, keinem direkten Sonnenlicht und keinem Feuer aus. Die Batterie darf nicht kurzgeschlossen, zerlegt oder überhitzt werden. VORSICHT: Es besteht Explosionsgefahr, wenn die Batterie falschen eingesetzt wird. Setzen Sie nur Batterien des gleichen oder eines gleichwertigen Typs ein.
- Achten Sie darauf, dass der Netzadapter flach auf einem Tisch oder dem Fußboden liegt. Wenn Sie den Netzadapter in hängender Position mit dem Netzkabelbelegung nach oben platzieren, könnten Wasser oder sonstige Fremdstoffe in den Adapter gelangen und zu Fehlfunktionen führen.

01 ÜBERPRÜFEN DER KOMPONENTEN


- Soundbar-Hauptgerät
- Soundbar-Fernbedienung
- Subwoofer
- Netzkabel, 2-mal (Subwoofer, Soundbar)
- Netzadapter
- HDMI-auf-Micro-HDMI-Kabel
- Wandhalterungsführung
- Aufhängungsschraube, 2-mal
- Schraube (M5 x L55), 4-mal
- Schraubenanker, 4-mal
- Wandhalterung, 2-mal

HINWEIS

- Weitere Informationen zur Stromversorgung und zum Stromverbrauch finden Sie auf dem Aufkleber am Gerät. (Aufkleber: Unterer Teil des Soundbar-Hauptgeräts)
- Wenden Sie sich wegen der Verwendung zusätzlicher Komponenten oder optionaler Kabel an ein Servicezentrum oder den Kundendienst von Samsung.

02 PRODUKTÜBERSICHT

Oberer Steuerungsbereich der Soundbar

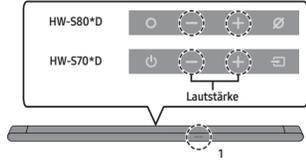

- (M)ultifunktions-Taste**
Drücken Sie im Standby-Modus die **(M)ultifunktions**, um die Soundbar einzuschalten. Drücken Sie die Taste **(M)ultifunktions**, um den Modus zu wechseln.
- (M)ikro Ein/Aus-Taste**
Drücken Sie Taste, um das Mikrofon ein- oder auszuschalten. Bei ausgeschaltetem Mikrofon leuchtet die LED-Anzeige rot.

- LED-Anzeige**
Die LED-Anzeige blinkt, leuchtet oder wechselt die Farbe, je nach dem aktuellen Modus oder Status der Soundbar.
- (Netz)-Taste**
Schaltet den Strom ein und aus.
- (Quelle)-Taste**
Drücken Sie die **(Quelle)**-Taste, um die Eingabequelle zu ändern.

Betriebstemperaturbereich:
+10 °C bis +40 °C
Betriebsfeuchtigkeitsbereich:
10 % bis +80 %, nicht kondensierend

Lagertemperaturbereich:
-20 °C bis +45 °C
Lagerfeuchtigkeitsbereich:
5 % bis +95 %, nicht kondensierend

Unterstützte Wiedergabeformate
Dolby 5.1ch / Dolby Digital Plus / Dolby TRUE HD / Dolby ATMOS / DTS 5.1ch / LPCM 8ch

HINWEIS

Samsung Electronics Co., Ltd behält sich das Recht vor, Spezifikationen ohne vorherigen Hinweis zu ändern. Gewicht und Abmessungen sind Annäherungswerte.

Vorsichtsmaßnahme: Die Soundbar wird bei der WLAN- oder Bluetooth-Aktivierung automatisch neu gestartet.

Allgemeiner Stromverbrauch im Standby (W)
2,0 W

So deaktivieren Sie die WLAN-Verbindung:
Drücken und halten Sie die **CH LEVEL**-Taste an der Fernbedienung der Soundbar mehr als 30 Sekunden lang, um die WLAN-Verbindung ein-/auszuschalten.

So deaktivieren Sie die Bluetooth-Verbindung:
Drücken und halten Sie die **TONE CONTROL**-Taste an der Fernbedienung der Soundbar mehr als 30 Sekunden lang, um die Bluetooth-Verbindung ein-/auszuschalten.

- Hiermit erklärt Samsung Electronics, dass diese Funkausstattung mit der Direktive 2014/53/EU und den relevanten gesetzlichen Anforderungen von Großbritannien konform ist.

Der vollständige Text der Konformitätserklärung ist unter folgender Internetadresse verfügbar: <http://www.samsung.com> navigieren Sie dort zu „Support“ und geben Sie den Modellnamen ein. Dieses Gerät kann in allen Ländern in der EU und in Großbritannien verwendet werden. Die 5GHz WLAN(Wi-Fi) oder SRD)-Funktion dieses Gerätes darf nur im Innenbereich genutzt werden.

- AUSGANGSLEISTUNG DES DRAHTLOSGERÄTS**
Maximale RF-Transmitterleistung :
100 mW mit 2,4 GHz – 2,4835 GHz,
200 mW mit 5,15 GHz – 5,25 GHz und 5,47 GHz – 5,725 GHz,
100 mW mit 5,25 GHz – 5,35 GHz
25 mW mit 5,725 GHz – 5,875 GHz

- Wenn Sie in im **„Bluetooth“**-Modus in den Bluetooth-Pairing-Status wechseln möchten, drücken und halten Sie die Taste **(M)ikro Ein/Aus** oder **(Quelle)** oben auf der Soundbar mehr als 5 Sekunden lang.


Hinter Platte der Soundbar



- SERVICE**
Schließen Sie ein USB-Speichergerät an, um die Software des Produkts zu aktualisieren.
- HDMI (eARC)**
Verbindung mit dem HDMI-Anschluss eines Fernsehers.
- DC 19V**
Verbinden Sie den Netzadapter. (Stromversorgungseingang)

03 ANSCHLIESSEN DER SOUNDBAR

Anschließen des Stroms und der Geräte

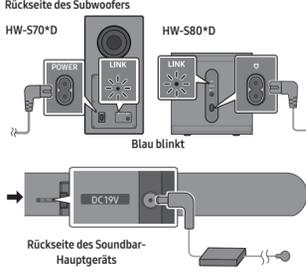

- Die LED-Verbindungsanzeige **LINK** hört auf zu blinken und leuchtet dauerhaft blau, wenn eine Verbindung zwischen der Soundbar und dem drahtlosen Subwoofer hergestellt ist.

04 VERWENDUNG EINER KABELVERBINDUNG

Anschluss mit einem HDMI-zu-Micro-HDMI-Kabel



HINWEIS

- Achten Sie bei Verwendung eines Micro-HDMI-zu-MINI-HDMI-Kabels darauf, den Kabelanschluss nicht zu beschädigen.
- Wenn der TV-Ton nicht zu hören ist, drücken Sie die Taste **(M)ultifunktions** / **(Quelle)** auf der Oberseite der Soundbar oder die Taste **(Quelle)** auf der Fernbedienung, um den „TVARC“-Modus auszuwählen.
- Es wird ein von HDMI.org zertifiziertes HDMI-Kabel empfohlen.



Verwenden der Q-Symphony-Funktion

Wenn die Soundbar eine Verbindung mit einem Samsung TV-Gerät herstellt, das die Q-Symphony-Funktion unterstützt, können Sie den Ton gleichzeitig über die Soundbar und das TV-Gerät wiedergeben. Wenn Sie die Q-Symphony-Funktion verwenden, können Sie mit dem Surround-Ton auf dem TV-Gerät einen satteren, dreidimensionalen Surround-Toneffekt genießen.


Wenn die Soundbar verbunden ist, wird das Menü **Q-Symphony*** auf dem TV-Gerät angezeigt. (Die angezeigte Meldung kann je nach TV-Modell unterschiedlich sein.) (Einstellungen (⊞) → Alle Einstellungen (⊞) → Sound → Tonausgang)

05 VERWENDUNG EINER DRAHTLOSEN VERBINDUNG

Verbindung per Bluetooth



- Suchen Sie auf Ihrem TV- oder Mobilgerät nach dem Bluetooth-Gerät.

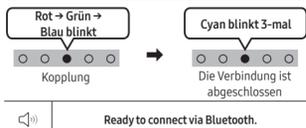

HINWEIS

- Wenn Sie bei der Verbindung mit einem Bluetooth-Gerät nach einem PIN-Code gefragt werden, geben Sie **<0000>** ein.

Verbinden per WLAN (Drahtloses Netzwerk)

- Zum Verbinden einer Soundbar mit einem Mobilgerät über ein drahtloses Netzwerk (WLAN) ist die **SmartThings**-App erforderlich.
- Verbinden Sie Ihr Mobilgerät (Smartphone, Tablet, etc.) mit dem WLAN-Netzwerk, mit dem das Fernsehgerät verbunden ist.
- Installieren und starten Sie die **SmartThings**-App auf Ihrem Mobilgerät (Smartphone, Tablet, etc.).
- Befolgen Sie die Anweisungen auf dem App-Bildschirm auf dem Mobilgerät, um die Soundbar mit Ihrem WLAN-Netzwerk zu verbinden.