
KERNAU

USER MANUAL
WASHING MACHINE
KFWM 9645 I Steam
KFWM 9645 I DI Steam

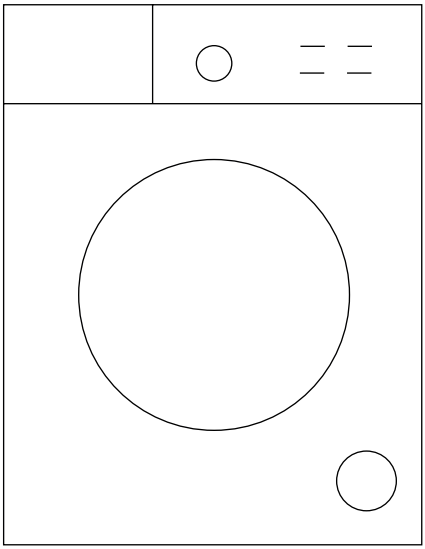

DEAR CUSTOMER,

Thank you for placing your trust in us and choosing the Kernau brand.

To meet your expectations, we manufacture our appliances in specialised factories using the latest technology and subject them to rigorous quality testing. To ensure that the product you have chosen serves you for as long as possible, please familiarise yourself with the operating, cleaning and maintenance instructions provided below. In this manual, we aim to introduce you to all the features of the product you have purchased, as well as to provide information on safety, installation, optimal settings and economical use. Here you will find valuable advice on how to use the appliance most effectively in line with your current needs.

The product you have purchased was manufactured in a modern and technologically advanced facility.

Before using the appliance, we advise you to read this manual thoroughly and keep it for future reference, so that the functions of your appliance remain as they were on the first day of purchase for a long time to come.

PLEASE NOTE

This user guide applies to a number of product models. Your device may not be equipped with some of the features listed in this guide.

The product images are schematic.
Items marked with (*) are optional.

Icon	Signature
	Indicates a risk of personal injury, death or significant material damage if the warning bearing this symbol is ignored.
	Risk of electric shock
	Indicates a fire risk
	For domestic and indoor use only.
	Useful information to help you understand how the device works and make the most of its features
	It highlights the need to read the instructions in order to understand how the product works and how to use it.

CONTENT

1. SAFETY INSTRUCTIONS 1
1.1 General Safety Warnings 2
1.2 Door Emergency Opening Function 4
1.3 During Use 8
1.4 Packaging and Environment 9
1.5 Savings Information 10
2.TECHNICAL SPECIFICATIONS 11
2.1 Overview 11
2.2 Technical Specifications 11
3.INSTALLING THE MACHINE 12
3.1 Removal of the Transport Safety Screws 12
3.2 Adjusting the Feet / Adjustable Stages 12
3.3 Electrical Connection 13
3.4 Water Connection 13
3.5 Water Drain Connection 14
4.INTRODUCTION OF CONTROL PANEL 14
4.1 Detergent Drawer 15
4.2 Compartments 16
4.3 Electronic Display 17
4.4 Major symbol descriptions 18
5.PREPARATIONS FOR WASHING 18
5.1 Sorting the Laundry 18
5.2 Loading the Machine with Laundry 19
5.3 Adding Detergent to the Machine 20
5.4 Starting your machine 20
5.5 Programme selection 20
5.6 Half load detection system 21
5.7 Auxiliary Functions **21**
5.8 Child Lock 24
5.9 If you want to cancel a running program: 24
5.10 Program End 24
6.PROGRAMME TABLE 26
6.1 Important Information 29
7. MAINTENANCE AND CLEANING OF YOUR MACHINE 30
7.1 Warning 30
7.2 Water Inlet Filters 30
7.3 Pump Filter 31
7.4 Detergent Drawer 32
8.BODY / DRUM 33
9.TROUBLESHOOTING SMALL FAULTS 34
10.AUTOMATIC FAULT WARNINGS AND REQUIRED ACTIONS 36

1. SAFETY INSTRUCTIONS

Operation voltage / frequency (V/Hz)	(220-240) V~/50Hz
Total current (A)	10
Water pressure (Mpa)	Maximum 1 Mpa / Minimum 0.1 Mpa
Total power (W)	2100
Total dry laundry capacity (kg)	9

- Do not install your machine on a carpet or such grounds that would prevent the ventilation of its base.
- The appliance is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children of less than 3 years should be kept away unless continuously supervised.
- Call the nearest authorised service centre for a replacement if the power cord malfunctions.
- Use only the new water inlet hose thats is provided with your machine when connecting to water supply. Never use old, used or damaged water inlet hoses.
- Children should not play with the appliance.

- Cleaning and user maintenance should not be made by children without supervision.

NOTE: For a softcopy of this user manual, please contact the following address: “washingmachine@ standardtest. info”. In your e-mail, please provide the model name and serial number (20 digits) which you can find on the appliance door.



Read this user manual carefully.

Your machine is for domestic use only. Using it for commercial purposes will cause your warranty to be cancelled.

This manual has been prepared for more than one model therefore your appliance may not have some of the features described within. For this reason, it is important to pay particular attention to any figures whilst reading the operating manual.

1.1 General Safety Warnings

- The necessary ambient temperature for operation of your Washing Machine is 15-25 ˚C.
- Where the temperature is below 0 ˚C, hoses may split or the electronic card may not operate correctly.
- Please ensure that garments loaded into your Washing Machine are free from foreign objects such as nails, needles, lighters and coins.
- **It is recommended that for your first wash, you select the 90° Cotton programme without**

laundry and half fill compartment II of the detergent drawer with a suitable detergent.

- To avoid a buildup of detergent residue, only put softener or detergent in the drawer at the beginning of each wash.
- Unplug your Washing Machine and switch off the water supply if the Washing Machine is left unused for a long time. We also recommend that you leave the door open to prevent build up of humidity inside the Washing Machine.
- Some water may be left in your Washing Machine as a result of quality checks during production. This will not affect the operation of your Washing Machine.
- The packaging of the machine could be hazardous to children. Do not allow children to play with the packaging or small parts from the Washing Machine.
- Keep the packaging materials in a place where children cannot reach them, or dispose of them appropriately.
- Use pre-wash programs only for very dirty laundry.

⚠Never open the detergent drawer while the machine is running.

- In the event of a breakdown, unplug the machine from the mains supply and turn the water supply off. Do not attempt to carry out any repairs. Always contact an authorised service agent.
- Do not exceed the maximum load for the washing

programme you have chosen.

⚠Never force the door open when your Washing Machine is running.

- In the event of a breakdown, unplug the machine from the mains supply and turn the water supply off. Do not attempt to carry out any repairs. Always contact an authorised service agent.
- Do not exceed the maximum load for the washing programme you have chosen.

⚠Never force the door open when your Washing Machine is running.

- Washing laundry containing flour may damage your machine.
- Please follow the manufacturers' instructions regarding the use of fabric conditioner or any similar products that you intend to use in your Washing Machine.
- Make sure that the door of your Washing Machine is not restricted and can be opened fully.


Install your machine in a location that can be fully ventilated and preferably has constant air circulation.

1.2 Door Emergency Opening Function

The door will remain locked in case of any power interruption or if power to your washing machine is cut before the programme is completed.

To open the door;

1. Turn off the machine. Unplug the machine.
2. There may be water inside your machine. Therefore, to ensure the door opens properly, the water inside the machine must first be drained. Follow the instructions in the section on cleaning the pump filter to drain the water from the machine. (Do not touch the water flowing from the machine during the drainage process, as the water inside the machine may be hot.) (*)
3. After draining the water inside the machine, use a tool to pull the emergency release mechanism downward and open the door at the same time.

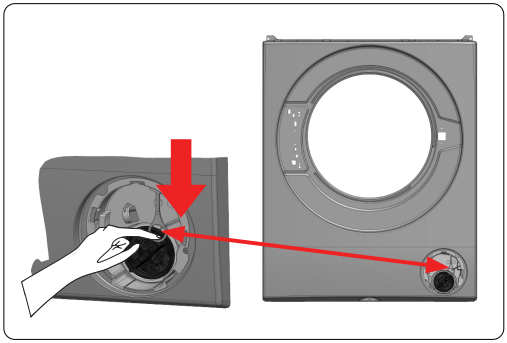

4. If the door is closed again after having been opened using the emergency release mechanism, it will remain locked. The emergency release mechanism must be used again to open the door while no power is available.


⚠Read these warnings. Follow the advice given to protect yourself and others from risks and fatal injuries.

RISK OF BURNS


⚠Do not touch the drain hose or any discharged water while your Washing Machine is running. The

high temperatures involved pose a burn risk.

⚠⚠RISK OF DEATH FROM ELECTRICAL CURRENT



- Do not connect your Washing Machine to the mains electricity supply using an extension lead.
- Do not insert a damaged plug into a socket.
- Never remove the plug from the socket by pulling the cord. Always hold the plug.



- Never touch the power cord/plug with wet hands as this could cause a short circuit or electric shock.



- Do not touch your Washing Machine if your hands or feet are wet.



- A damaged power cord/plug can cause fire or give you an electric shock. When damaged it must be replaced, this should only be done by qualified personnel.

⚠Risk of flooding

- Check the speed of water flow before placing the drain hose in a sink.
- Take necessary measures to prevent the hose from slipping.
- Water flow may dislodge the hose if it is not properly secured. Make sure the plug in your sink does not block the plug hole.

⚠Danger of Fire

- Do not store inflammable liquids near your machine.

- The sulphur content of paint removers may cause corrosion. Never use paint removing materials in your machine.
- Never use products that contain solvents in your machine.
- Please ensure that garments loaded into your Washing Machine are free from foreign objects such as nails, needles, lighters and coins.

Risk of fire and explosion

⚠Risk of falling and injury

- Do not climb on your Washing Machine.
- Make sure hoses and cables do not cause a trip hazard.
- Do not turn your Washing Machine upside down or on its side.
- Do not lift your Washing Machine using the door or detergent drawer.

⚠The machine must be carried by at least 2 people.



⚠Child safety

- Do not leave children unattended near the machine. Children might lock themselves in the machine resulting in risk of death.
- Do not allow children to touch the glass door during operation. The surface becomes extremely hot and may cause damage to skin.

- Keep packaging material away from children.
- Poisoning and irritation may occur if detergent and cleaning materials are consumed or come into contact with the skin and eyes. Keep cleaning materials out of the reach of children.



1.3 During Use

- Keep pets away from your machine.
- Please check the packaging of your machine before installation and the outer surface of the machine once the packaging has been removed. Do not operate the machine if it appears damaged or if the packaging has been opened.
- Your machine must only be installed by an authorised service agent. Installation by anyone other than an authorised agent may cause your warranty to be void.
- Children and persons with reduced physical, sensory or mental capabilities and lack of experience and knowledge should not use this appliance without supervision.
- Cleaning and user maintenance shall not be done by children without supervision.
- Only use your machine for laundry that is labelled as suitable for washing by the manufacturer.
- **Before operating the washing machine, remove the 4 transit bolts and rubber spacers from the rear of the machine. If the bolts are not removed they may cause heavy vibration,**

noise and malfunction of the machine and cause the guarantee to be void.

- Your warranty does not cover damage caused by external factors such as fire, flooding and other sources of damage.
- Please do not throw away this user manual; keep it for future reference and pass it onto the next owner.

NOTE: Specifications for the machine may vary depending on the product purchased.

Your washing machine's belt change must be made by only authorised services.

Only original belts must be used in belt change.

NOTE: Run the first wash cycle in your machine at 90˚C with no laundry inside.

1.4 Packaging and Environment

Removal of packaging materials

Packaging materials protect your machine from any damage that might occur during transportation. The packaging materials are environmentally friendly as they are recyclable. Use of recycled material reduces raw material consumption and decreases waste production.

1.5 Savings Information

Some important information to get the most efficient use out of your machine:

- Do not exceed the maximum load for the washing programme you have chosen. This will allow your machine to run in energy saving mode.
- Do not use the pre-wash feature for lightly soiled laundry. This will help you save on the amount of electricity and water consumed.

CE Declaration of conformity


We declare that our products meet the applicable European Directives, Decisions and Regulations and the requirements listed in the standards referenced.


Disposal of your old machine



The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

2. TECHNICAL SPECIFICATIONS

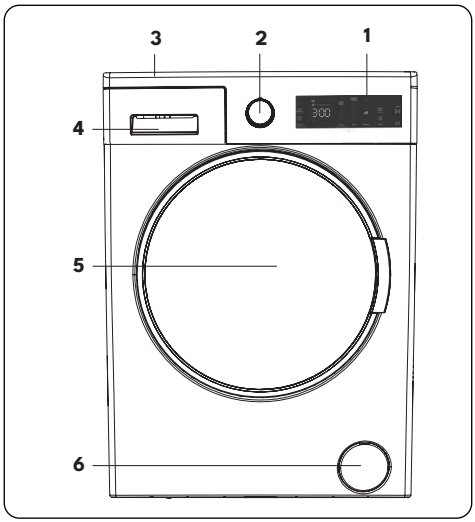

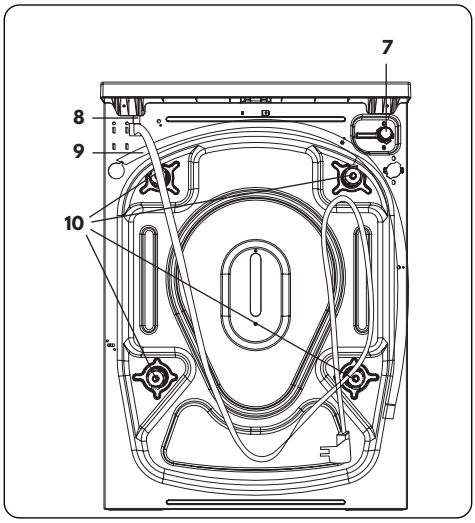

2.1 Overview


1. Electronic Display
2. Programme Knob
3. Upper Table
4. Detergent Drawer
5. Door
6. Pump Filter Cover
7. Water Inlet Valve
8. Power Cord
9. Discharge Hose
10. Transport Safety Screw

2.2 Technical Specifications

Operation voltage / frequency (V/Hz)	(220-240) V~/50Hz
Total current (A)	10
Water pressure (Mpa)	Maximum: 1 Mpa Minimum: 0.1 Mpa
Total power (W)	2100
Total dry laundry capacity (kg)	9
Spin speed (rpm)	1400
Number of programs	14
Dimensions (mm)	
Height	845
Width	596
Depth	497

3. INSTALLING THE MACHINE


3.1 Removal of the Transport Safety Screws

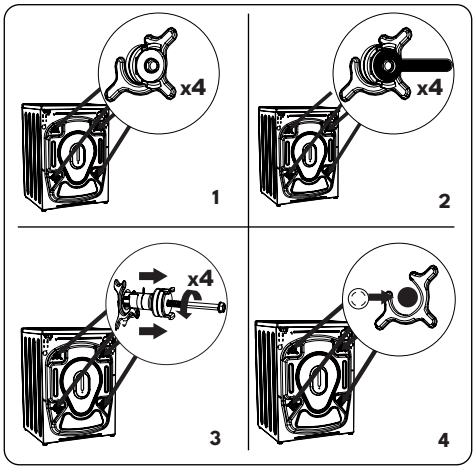

1. Before starting your washing machine,the transportation safety screws on the back of the appliance must definitely be removed.
2. For this, the transportation safety screws are loosened with the help of a proper spanner by being turned counter-clockwise.
3. Pull and remove the transportation screws.
4. Insert the plastic transportation screw plugs available in the accessory bag in the places where the transportation screws have been removed.
5. The removed transportation safety screws must be stored to be used during any transportation (moving).


NOTE: You must remove the transportation screws of your appliance before the first use. Malfunctions that may occur on the washing machines operated with the transportation screw not being removed are out of warranty coverage.

3.2 Adjusting the Feet / Adjustable Stages

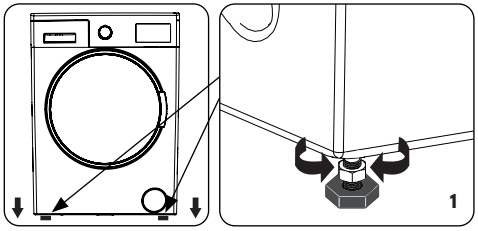

1. Do not install your washing machine on carpeted or similar surfaces that can block the base ventilation.

- For a silent and non-vibrating operation, your machine must be placed on a level, non-skid and firm ground.
- You can adjust the balance of your washing machine with its adjustable legs.
- Loosen the metal adjustment nut.

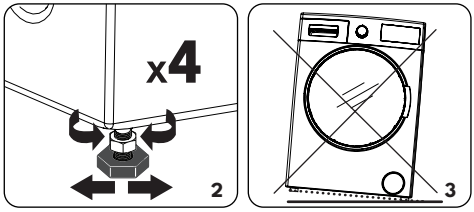


2. Adjust the legs up or down by rotating them.

- After balancing, tighten the metal adjusting nut by rotating it upwards again.

3. Never place any cardboard, wedge or similar materials under the appliance for balancing the surface defects on ground level.

- Leg adjustment may get out of order while you clean the floor where the machine stands, please be careful.


3.3 Electrical Connection

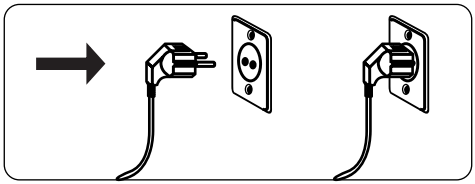


- Your washing machine is set to 220-240V and 50 Hz.
- The mains cable of your washing machine is fitted with an earthed special plug. The plug must definitely be inserted into an earthed outlet with the rating of 10 amperes. Fuse current rating of the power line where the outlet is connected must also be 10 amperes. Have a qualified electric technician set up if you do not have such an outlet or fuse.
- Our company shall not be responsible any damages that may arise due to use without any earthing.

NOTE: Operating your machine at low voltage values will shorten the service life and decrease the performance of your machine.

3.4 Water Connection

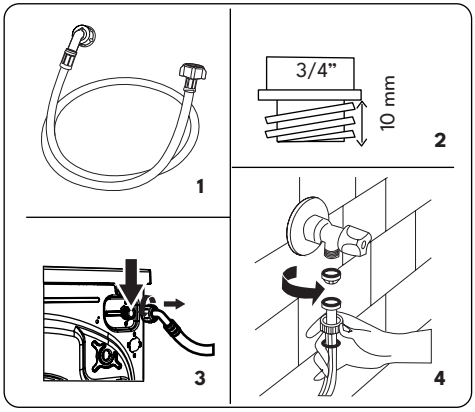

1. Depending on the model, your machine may have a single water inlet (cold) or a dual water inlet (cold/hot). The hose with white cap is for cold water intake while the hose with red cap is for hot water intake (applicable for machines with double water inlet).
   - Seals have been installed on the ends of the hoses to prevent water leaks at the connection points. Before connecting the hose, check that these seals at the ends of the hose are present and in good condition.
2. Mount the new water intake hoses on a ¾" threaded tap.
3. Connect the end of the water inlet hoses with the white elbow to the water inlet valve at the back of the machine that has the white filter, and connect the end with the red elbow (applicable to machines with dual

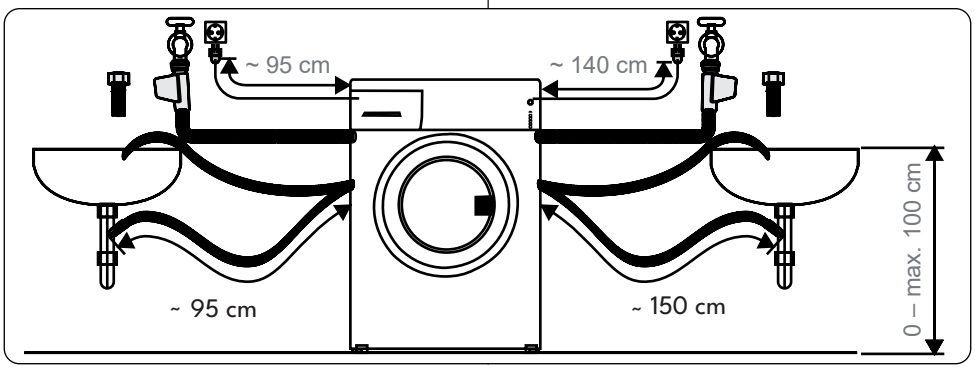

water inlets) to the one with the red filter.


- Tighten the plastic parts by hand. In the cases where you are unsure, have a qualified plumber set it up for you.
- A tap with the pressure of 0.1-1 Mpa will enable your machine to run more efficiently. (0.1 Mpa pressure indicates that more than 8 liters of water run through a fully turned on tap in 1 minute.)

4. Check the impermeability of connection points by turning on the tap fully after installation.

- Keep attention on the new water hoses to prevent them from getting folded, ruptured, crushed and also, tampered in the dimensions.
- If your washing machine features a double water inlet, the hot water temperature must be max. 70˚C.


NOTE: When connecting the water inlet to your machine, be sure to use the new water inlet hose that comes with the machine. Never use the old, used or damaged water intake hoses.

3.5 Water Drain Connection

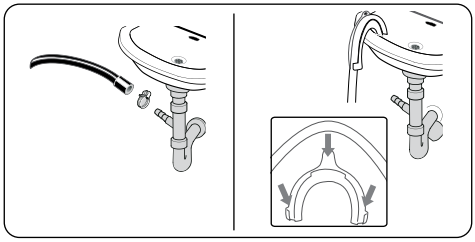


- The end of the water drain hose can be fitted directly on the water discharge hole or on a special apparatus installed on the outlet joint of the sink.
- Never try to extend the water drain hose by jointing.
- Do not place the drain hose of your washing machine into any container, bucket or bathtub.
- Make sure the water drain hose is not kinked, twisted, crushed, or stretched.
- The ground clearance for the water discharge hose to be fitted must be maximum 100 cm.


4. INTRODUCTION OF CONTROL PANEL

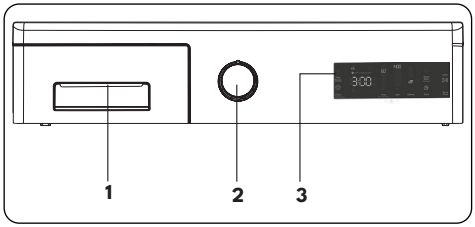

1. Detergent Drawer
2. Programme Knob
3. Electronic Display

4.1 Detergent Drawer

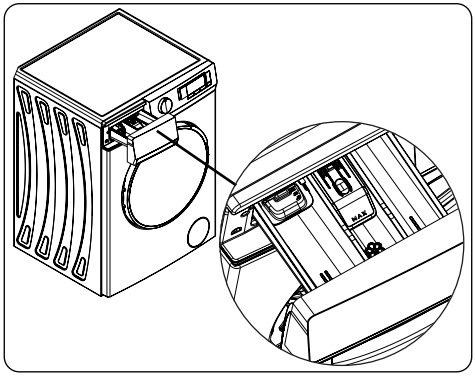

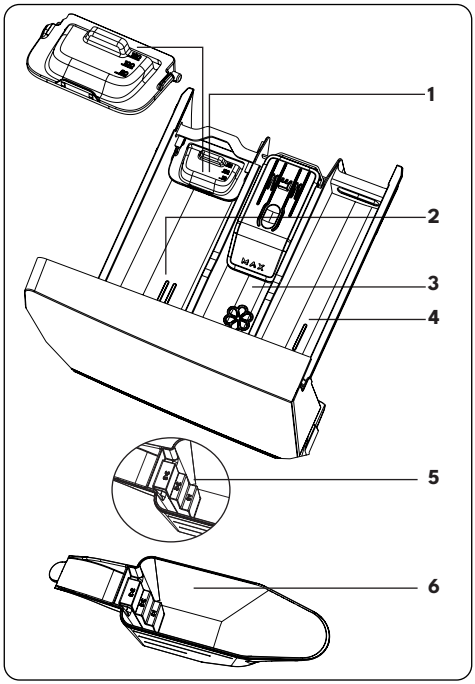

1. Liquid Detergent Level Plate (*)
2. Main Wash Detergent Compartment
3. Fabric Softener Compartment
4. Pre-wash Detergent Compartment
5. Powder detergent level stages
6. Powder detergent scoop (**)

(*) When using liquid detergent, you must adjust the plate to the correct position


(**) The appliance specifications may vary depending on the purchased product.

Liquid Detergent Level Plate:


It helps ensure the correct amount of liquid detergent is used.
The liquid detergent level plate is installed inside the drawer and positioned for use with powder detergent.

If it becomes dislodged, it can be reattached by following the steps below.


1. The drawer is removed from the machine.

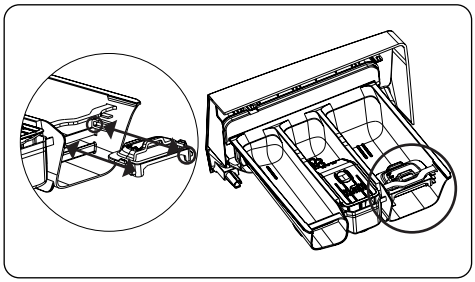

2. The plate is positioned against the back of the main wash detergent compartment, as shown in the illustration. To ensure proper installation, it is recommended to press the plate into its place from both sides.
3. To use liquid detergent, pull the plate forward and lower it to the appropriate position.

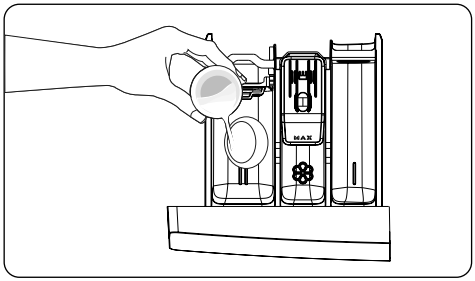


4. When using powdered detergent, make sure the plate is in the correct position. Once aligned, the plate is secured by pushing it backward.

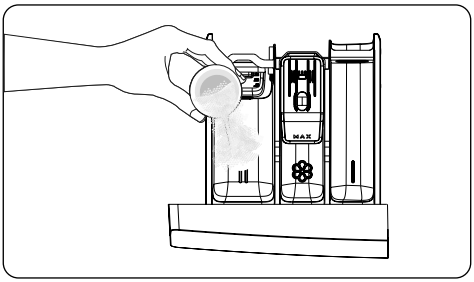


4.2 Compartments

Main wash detergent compartment:

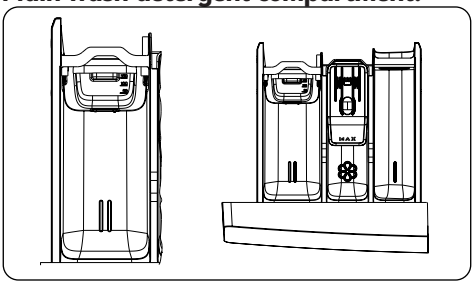

Only substances such as detergents (liquid or powder) and anti-limescale products can be used in this compartment. The liquid detergent level indicator is installed inside the drawer and comes adjusted for use with powder detergent. When using liquid detergent, you must adjust the plate to the correct position.


Fabric softener or fabric starch compartment:

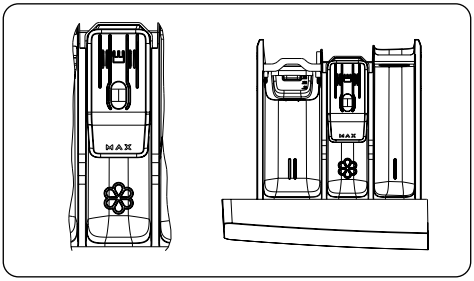

Only substances such as fabric softener can be used on this compartment (follow the amount and type as recommended by the manufacturer). Fabric softener used for laundry can remain in this compartment sometimes. This is because the fabric softener is not a fluid substance. It is recommended that you use liquid fabric softeners having less viscosity or use the softener after diluting.

Do not exceed the -MAX- level in the fabric softener compartment.


Pre-wash detergent compartment:

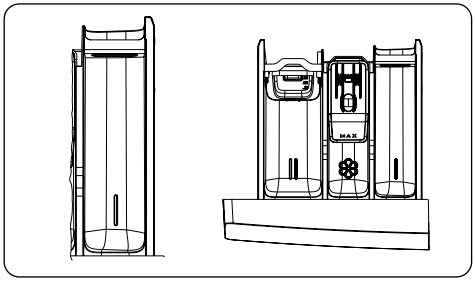

This compartment must only be used if the pre-wash feature is selected. It is recommended that you use pre-wash feature for heavily soiled laundries.

(*) The appliance specifications may vary depending on the purchased product.

4.3 Electronic Display

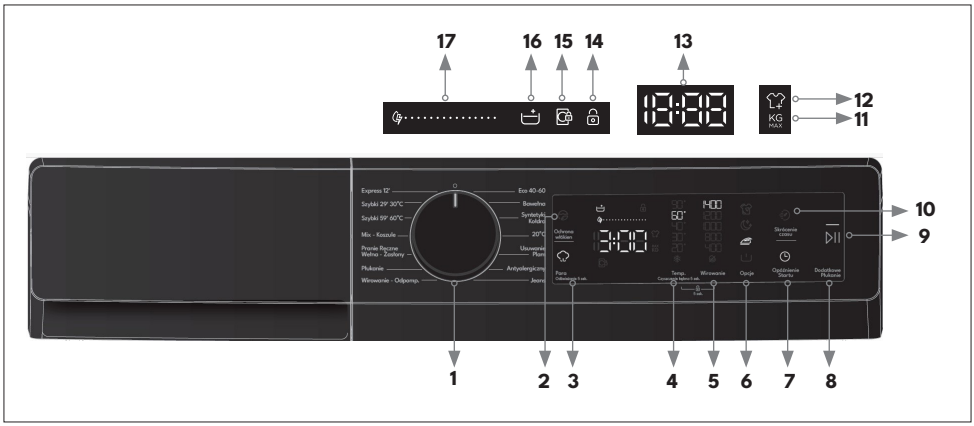

1. Programme Knob
2. Fiber Blocker Auxiliary Function Key
3. Auxiliary Function Key
4. Wash Water Temperature Adjustment Key
5. Spin Speed Adjustment Key
6. Options Key
7. Delayed Start Auxiliary Function Key
8. Extra Rinse Function Key
9. On / Off Button
10. Quick Wash Auxiliary Function Key
11. Programme Max. Laundry Load LED Light
12. Add Laundry LED Light
13. Digital Display
14. Child Lock LED Light
15. Door Lock LED Light
16. Auxiliary Rinse Function LED Light
17. Energy/Water Efficiency Bar

4.4 Major symbol descriptions

1 Use the programme knob to select the programme you want to use for your laundry. You can adjust the programme selection by turning the programme knob in either direction. Please ensure that the programme knob is set exactly to the programme you want.

12 In cases where you can add laundry to your machine, **Add Laundry LED Light** lights up. If the Add Laundry LED Light is not on, you cannot add laundry to your machine. If you want to add laundry while the washing is in progress, you can add laundry by putting the machine in Standby mode.

13 11 For the washing programme you have selected, the **Digital Display** shows the washing time and max kg for this washing programme respectively. When the maximum kg information is displayed, the **Program Max. Laundry Load LED Light** light up.

15 When the door of your machine is locked, the **Door Lock LED Light** will stay on active until the washing process is finished.

17 Energy/Water Efficiency Bar:


The energy/water efficiency bar shows the amount of energy and water consumption. The bigger the bar is, the more energy or water consumption you will have. The energy/water efficiency bar might extend or shorten depending on the selected program's duration, temperature setting, spin speed and other auxiliary functions.

NOTE: Your washing machine is switched on with the key sound feature activated. You can turn off the **key sound*** of your washing machine by pressing and holding the Spin Speed Adjustment and Delayed Start Auxiliary Function keys at the same time. You can activate it again with the same key combination.

(*) The appliance specifications may vary depending on the purchased product.

5. PREPARATIONS FOR WASHING

5.1 Sorting the Laundry

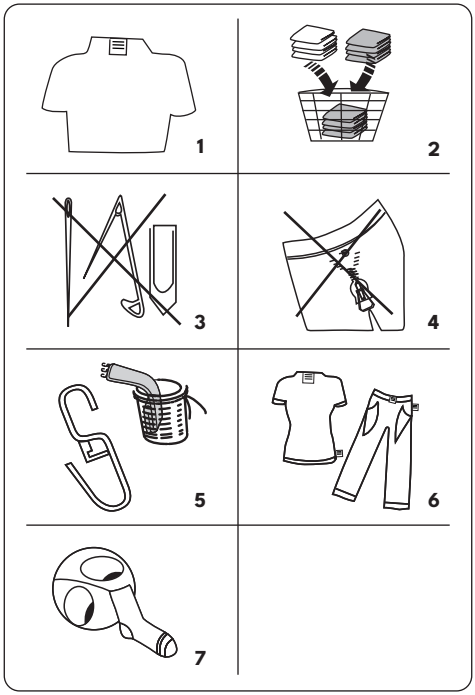

1. There are product labels on laundries describing their features. Wash your laundry according to the features on the product label.

- Sort your laundries according to their type (cotton, synthetic, delicate, woolen, etc.), washing temperatures (cold, 30˚, 40˚, 60˚, 90˚) and level of soiling (lightly soiled, normally soiled, heavily soiled).

2. Never wash your white clothes together with your coloured clothes.


- Wash your coloured clothes separately as they may cause colouring on the light coloured laundry.

3. Pay attention that there are no metal parts on your laundries or in their


pockets, remove them if any.

CAUTION: Malfunctions that may occur due to ingression of foreign materials into your machine are out of warranty coverage.

4. Zip and button up your laundries.
5. Remove the metal or plastic hooks on tulles and curtains, or put and tie them into a mesh bag.
6. Turn textiles such as trousers, knitwear, T-shirt and tracksuits inside out.
7. Wash small-sized laundries such as socks and handkerchiefs in a mesh bag.

 May be bleached	 Do not bleach	 Normal wash
 Ironing maximum temperature 150˚C	 Ironing maximum temperature 200˚C	 Do not iron
 May be dry-cleaned	 Do not dry-clean	 Place on flat surface
 Hang wet	 Must be hang-dried	 Do not tumble dry
 May be dry-cleaned with kerosene, absolute alcohol and R113.	 Perchloroethylene R11, R113, Petroleum	 Perchlorethylene R11, R113, Kerosene

5.2 Loading the Machine with Laundry

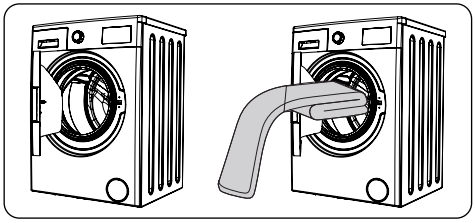


- Open the door of your machine for loading laundry.
- Check the inside of your machine's drum. There may be some items left from the previous washing cycles. If any, empty your machine before selecting any programme.

NOTE: Maximum load capacity of your appliance may vary depending on the selected programme. Do not exceed the dry load maximum capacity indicated on the programme table for washing programmes.


The following table shows approximate weights of typical laundry items:

LAUNDRY TYPE	WEIGHT (gr)
Towel	200
Linen	500
Bathrobe	1200
Quilt cover	700
Pillow slip	200
Underwear	100
Tablecloth	250

- Distribute your laundries evenly in your machine. Place your items such as duvet or blanket in the machine after folding them as depicted in the figure.

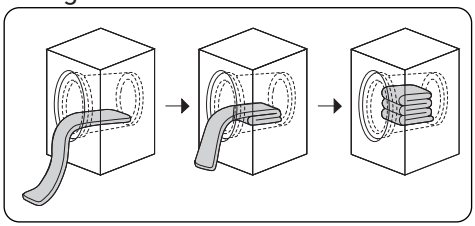

- Load each laundry item separately.
- When closing the door of your machine, be careful not to let any laundry get caught between the door and the bellows seal.
- Make sure your machine's door is closed securely.

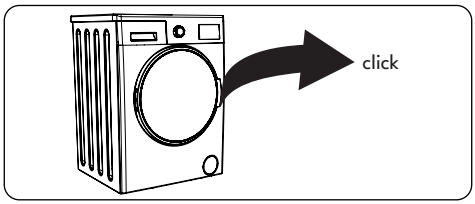


- If the door is not closed securely, your machine will not initiate the washing cycle.

5.3 Adding Detergent to the Machine

The detergent amount you will add depends on the following criteria:

- Detergent use will change according the soiling level of your laundries. Do not pre-wash your lightly soiled garments, add a little amount of detergent into the number two compartment of the detergent drawer.
- Using the amount of detergent recommended by the manufacturer on the packaging prevents excessive foaming and poor rinsing.
- For heavily soiled laundry, select a program with a pre-wash program, and place ¼ of the detergent in compartment 1 of the detergent drawer and the remaining ¾ in compartment 2.
- Use detergents intended for automatic washing machines. The recommended amounts of detergent to use for your laundry are listed on the detergent packaging.
- The more the hardness level of the water increases, the much the amount of detergent you will need to add.
- The more the quantity level of the laundries increases, the much amount of detergent you will need to add.
- Add the fabric softener in the fabric softener compartment of the detergent drawer. Do not exceed the MAX level. Otherwise the fabric softener will be mixed with the washing water through siphon.
- You need to dilute high-intensity fabric softeners a little, before adding in the drawer. Because the high-intensity fabric softeners clog the siphon and block the flow of the softener.
- You can use liquid detergents on any programmes with no pre-wash feature. The liquid detergent level indicator is installed inside the drawer and comes adjusted for use with powder detergent. When using liquid detergent, you must adjust the plate to the correct position. The next time you use it, make sure this plate is pulled up and secured before adding powder detergent.

5.4 Starting your machine

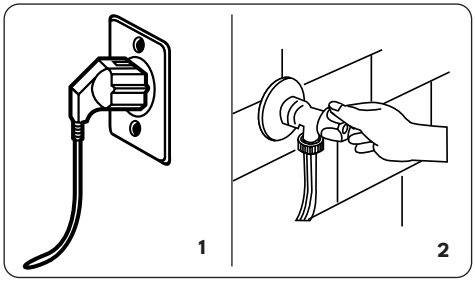

1. Plug the machine into an outlet.
2. Open the water tap.
   - Open the washing machine's door.
   - Distribute your laundries evenly in your washing machine.
   - For closing the door, push it till you hear the lock sound.

5.5 Programme selection


Select the appropriate programme for your laundry from the programme table.

5.6 Half load detection system

Your washing machine is equipped with a half load detection system. If you load half or lesser amount of laundry than the maximum load capacity of your product, some of the programmes will run by economising the water and power usage. When half load function is activated, the washing machine can end the programme that you have set in a shorter while.

(*) The appliance specifications may vary depending on the purchased product.

5.7 Auxiliary Functions

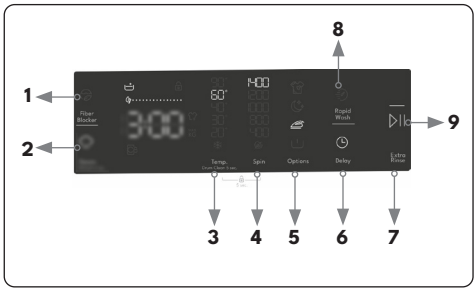

You can select auxiliary functions before starting the washing program.

- Press the key of the auxiliary function you want to select.
- If the symbol of the auxiliary function is continuously on in the electronic display, the selected auxiliary function will be enabled.
- If the symbol of the auxiliary function is flashing in the electronic display, the selected auxiliary function will not be enabled.

Reason for not enabling the function:

- That auxiliary function might not be available for the selected washing program.
- The machine might have passed the step where that auxiliary function could be applied.
- The auxiliary function might be incompatible with another auxiliary function you have previously selected.

1. Fiber Blocker auxiliary function

When the Fiber Blocker option is selected, the mechanical action of the washing programme is intentionally reduced. The drum rotation speed is reduced, the motion profile is smoothed out, and the impact of laundry falling from a height inside the drum is minimized. In addition, friction between the fabrics is reduced through gentler and more controlled drum movements. This way, both the fabrics wear out less and the amount of microplastics released into the environment is reduced.

- Press the **'Fiber Blocker'** auxiliary function key once.
- The prewash auxiliary function symbol LED light on your machine's display panel lights up.

NOTE: When you want to select Fiber Blocker auxiliary function, if symbol flashes on the screen, this means that this feature is not available in the selected washing programme.

2. Steam assisted anti-crease auxiliary function

Steam assisted anti-crease auxiliary function allows you to have less creased clothes after washing.

- Press the **'Steam assisted Anti-Crease'** auxiliary function key once.
- The steam auxiliary function symbol LED light on your machine's display panel lights up.

NOTE: When you want to select steam assisted anti-crease auxiliary function, if symbol flashes on the screen, this means that this feature is not available in the selected washing programme.

You can refresh your laundry by pressing the steam assisted anti-crease auxiliary function key for 5 seconds; this feature is available in all program settings. Thanks to this refreshing operation, steam penetrates the laundry and cleans your clothes by eliminating

undesired odours. It should be used with a maximum of 2 kg of laundry.

3. Selecting the washing water temperature

You can use the washing water temperature setting key to set the temperature of the washing water for your laundry.

- When you select a new program, the value displayed is the factory default for the selected program.
- You can press the washing water temperature setting key to decrease the washing water temperature gradually between the maximum water temperature of the selected program and cold water wash (❄).
- If you have skipped the washing water temperature you wanted to set, press the washing water temperature key repeatedly to select the desired temperature again.
- You can use this auxiliary function to wash your laundry with cold water (tap water).
- Each time the temperature setting key is pressed on the display panel, the temperature value decreases according to the program feature.

You can perform drum cleaning for your machine by pressing and holding the washing water temperature setting key for 5 seconds; this can be set in all program positions. It must be run unloaded. You can use a descaler or a washing machine drum cleaner specifically designed for washing machines. The temperature set during the drum cleaning process is 90˚C. It is recommended to use it every three months.

4. Spin speed selection

You can use the spin speed setting key to set the spin speed for your laundry.

- When you select a new program, the value displayed is the factory default for the selected program.
- You can press the spin speed setting key to decrease the spin speed gradually between the selected program's maximum spin speed and the spin cancelled (🚫) option.
- If you have skipped the spin speed you wanted to set, you can keep pressing the spin speed key to find the desired spin speed again.
- You can use this auxiliary function to wash your laundry without spinning.
- Each time the spin speed key is pressed on the display panel, the spin speed value decreases according to the program feature.

5. Options

With the options key, you can select the most suitable auxiliary function for your laundry by pressing the options key on the display panel.

5.1 Mixed Stains auxiliary function

You can remove various types of mixed stains from your laundry using this auxiliary function. To enable the Mixed Stains auxiliary function, press the options key until the Mixed Stains symbol appears. If the Mixed Stains LED is constantly on in the electronic display, it means that the auxiliary function is selected. As the machine will perform prewash when mixed stains is selected, add some detergent into the prewash section of the detergent drawer.

NOTE: Do not let the stains on your laundries to get dry and stuck in order for the auxiliary function dedicated for mixed stains selection to fully perform its functions. Clean the solids beforehand. Warning: Press on the newly formed stains on your laundries with a piece of cloth before starting washing them in your product. Do not rub.

NOTE: If the symbol does not light up on the screen when you try to select the Mixed Stains auxiliary function,

it means this feature is not available in the wash cycle you have selected.

5.2 Night Wash auxiliary function

Night Wash auxiliary function ensures a quiet wash without any spin cycle during the wash cycle. To activate the Night Wash auxiliary function, press the Options key until the night wash icon appears. If the Night Wash LED is constantly on in the electronic display, it means that the auxiliary function is selected.

- Towards the end of the washing, your washing machine can soak your laundries for maximum 10 hours without discharging the water inside by switching to the sleep mode.
- From the moment your machine enters this standby mode, you can cancel the selected operation by simply pressing the Start / Pause key and the washing program will resume from where it left off.

NOTE: If the symbol does not light up on the screen when you try to select the Night Wash auxiliary function, it means this feature is not available in the wash cycle you have selected.

5.3 Easy ironing auxiliary function

This auxiliary function allows you to have less creased clothes after washing. To enable the easy ironing auxiliary function, press the options key until the easy ironing symbol appears. If the easy ironing LED is constantly on in the electronic display, it means that the auxiliary function is selected.

NOTE: If the symbol does not light up on the screen when you try to select the Easy Iron auxiliary function, it means this feature is not available in the wash cycle you have selected.

5.4 Prewash auxiliary function

You can use this function to perform prewash before main wash cycle for your highly soiled laundry.

When you use this function, you need to add detergent into the prewash compartment of the detergent drawer. To enable the prewash auxiliary function, press the options key until the prewash symbol appears. If the prewash LED is constantly on in the electronic display, it means that the auxiliary function is selected.

NOTE: If the symbol does not light up on the screen when you try to select the prewash auxiliary function, it means this feature is not available in the wash cycle you have selected.

6. Delayed start auxiliary function

You can use this auxiliary function to delay the start time of the washing cycle for 1 to 23 hours.

To use the delay auxiliary function:

- Press the delay key once.
- "01h" will appear on the display. symbol will appear on the electronic display.
- Press the delay key until you reach the time after which you want the machine to start the washing cycle.
- If you have skipped the delay time you would like to set, you can press the delay key repeatedly until you reach that time again.
- To use the time delay function, you need to press the Start/Pause key to activate the machine.
- To cancel the delay function: If you have activated the function by pressing the Start/Pause key, pressing the delay key 1 time will cancel the selected operation. symbol will disappear on the electronic display.
- If you have not pressed the Start/ Pause key, press the delay key continuously until goes off on the electronic display. will go off on the electronic display.

7. Extra rinse auxiliary function

You can use this auxiliary function for extra rinse on your laundry.

- Press the **Extra rinse** auxiliary function key once.
- The prewash auxiliary function symbol LED light on your machine's display panel lights up.

NOTE: When you want to select extra rinse function, if symbol flashes on the screen, this means that this feature is not available in the selected washing program.

8. Quick wash auxiliary function

Using this auxiliary function, you can wash your laundry in less time and with less energy and water consumption. (It is recommended to load the machine with half or less than half of the capacity of the selected washing program.)

- Press the **Quick wash** auxiliary function key once.
- The Quick wash auxiliary function symbol LED light on your machine's display panel lights up.

NOTE: When you want to select Quick wash auxiliary function, if symbol flashes on the screen, this means that this feature is not available in the selected washing programme.

9. Start/pause key

By pressing the Start/Pause key you can start the program you have selected and put the ongoing program on hold.

5.8 Child Lock

Your machine is equipped with a child lock to protect the program progress if Washing Water Temperature Setting and Spin Speed Setting keys are pressed while washing is in progress. The child lock will be activated 5 seconds after pressing both keys 3 and 4 on the electronic display at the same time.

When activated, the symbol appears on the electronic display. If any key is pressed while the child lock is activated, the symbol flashes on the electronic display. To turn it off, you need to press the same keys for 5 seconds. When the child lock is deactivated, the symbol on the electronic display disappears.

5.9 If you want to cancel a running program:

- Turn the program knob to the “CANCEL” position.
- Your machine will stop washing process and the program will be cancelled.
- To discharge the water in the machine, select any program.
- Your machine will drain the water and cancel the program.
- You can select a new program and start the machine.


5.10 Program End

Your machine will automatically stop when the selected program ends.

- “End” will appear on the electronic display.
- You can open the machine door and take out the laundry. After taking out the laundry, leave the door open so that the inside of the machine can dry.
- Turn the program knob to the CANCEL position.
- Unplug your machine from the power outlet.
- Turn off the water tap.
- After each wash, check that there are

no foreign objects inside the drum or the bellows seal.

- If the holes in the bellows seal shown in the figure are clogged, they should be cleaned to improve washing performance, and the bellows seal should be dried with a dry cloth after each wash.

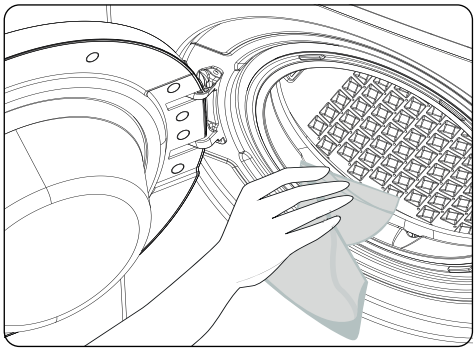

6. PROGRAMME TABLE

Program	Washing Temperature (°C)	Maximum Dry Laundry Amount (kg)	Detergent Dispenser	Program Duration (min.)	Laundry Type / Remarks
Eco 40-60	*40 - 60	9	2	228	Normally soiled, cotton and linen textiles. (Underwear, bed sheet, table clothes, (towels, max. 4,5 kg), bedclothes, etc.)
Cotton	*60 - 90 - “- -C” - 30 - 40	9	2	110	Dirty, light colors, whites, cotton and linen textiles (underwear, sheets, tablecloths, towels (maximum 4,5 kg), duvet covers, etc.)
Synthetic / Duvet	*40 - “- -C” - 30	4	2	135	Normally soiled synthetic or synthetic blended textiles. (Nylon socks, shirts, blouses, synthetic trousers, etc.) NOTE: When washing a quilt, the maximum weight is 3 kg, and the spin speed should be set to a maximum of 800 rpm.
20°C	*20 - “- -C”	4	2	59	Lightly soiled, cotton and linen textiles. (Underwear, bed sheet, table clothes, etc.)
Stain Care	* 60 - “- -C” - 30 - 40	4	1&2	122	Heavily soiled, cotton and linen textiles. (Underwear, bed sheet, table clothes, towels, duvet covers, etc.)
Allergy Safe / Pet Hair Removal*	*30 - 40 - 60 - “- -C”	4	2	78	Baby laundry (With the 30°C temperature selection, you can ensure hygiene on your laundry. With the 60°C temperature selection, you can provide a more intensive wash and hygiene) / The Pet Hair Removal program ensures that dust and pet hair from your pets, such as cats and dogs, are easily removed from your laundry through extra rinses (hot rinse). With this program, the wash cycle uses more water.
Jeans	*30 - “- -C”	4	2	89	Suitable for denim garments. Controlled washing and rinsing steps help reduce wear and tear on denim fabric. Suitable for denim trousers and denim jackets.
Spin / Drain	*“- -C”	9	-	15	If you want to get an additional spin after washing your laundry, you can use this programme for all kinds of laundry./ You can use the drain programme when you need to remove water that has accumulated inside the machine (such as when adding or removing laundry). To activate the drain programme, set the program button to the "Spin/ Drain" position. Then, you can start the program by selecting the "Cancel Spin" option using the Spin Speed Setting key.
Rinse	*“- -C”	9	-	24	If you want to get an additional rinse after washing your laundry, you can use this program for all kinds of laundry.
Wool / Hand Wash / Curtain	*30 - “- -C”	2	2	54	Woolen textiles having machine washable label. / Delicate textiles or clothes recommended for hand washing. / NOTE: When washing curtains, the maximum weight is 2 kg, and the spin speed should be set to a maximum of 800 rpm.
Mix / Shirt	*40 - “- -C” - 30	4	2	87	Dirty, cotton, synthetic, colored and linen textiles can be washed mixed. / You can use this program for shirts with machine washable labels.

Program	Washing Temperature (°C)	Maximum Dry Laundry Amount (kg)	Detergent Dispenser	Program Duration (min.)	Laundry Type / Remarks
Fast 59' 60°C	* 60 - "- -C" - 30 - 40	9	2	59	The Quick Wash programme cleans lightly soiled light-colored and white laundry in just 59 minutes at temperatures up to 60°C. The program's ability to operate at selectable temperatures ensures effective cleaning for various fabric types, while its capacity to wash loads up to the machine's full capacity allows you to easily wash large amounts of laundry. You can also wash your colored and dark-colored clothes by lowering the temperature.
(**) Fast 29' 30°C	*30 - 40 - "- -C"	4	2	29	The Quick Wash programme helps you save time by cleaning lightly soiled or stain-free black and/ or dark-colored laundry in just 29 minutes at temperatures as low as 30°C. You can quickly wash your lightly soiled or stain-free black or dark-colored laundry at half capacity and conveniently complete your daily laundry routine.
(***) Super Rapid 12'	*30 - "- -C"	2	2	12	The Quick Wash programme helps you save time by cleaning lightly soiled or stain-free black or dark-colored laundry in as little as 12 minutes at temperatures as low as 30°C. With this programme, you can quickly wash up to 2 kg of laundry. This programme is particularly useful in emergencies or when a quick cleanup is needed.

NOTE: PROGRAM DURATION MAY VARY DEPENDING ON THE AMOUNT OF LAUNDRY, TAP WATER, AMBIENT TEMPERATURE AND SELECTED AUXILIARY FUNCTIONS.

(*) Washing water temperature of the programme is the factory default.

(**) Please refer to the relevant table for this programme.

(***) NOTE: As the washing period is short, the amount of the detergent should be much less with respect to the other washing programs. If the machine detects an unbalanced load, the program duration will increase. You can open your washing machine's door 2 minutes after the washing programme ends.

The Eco 40-60 program can clean normally soiled cotton laundry that can be washed at 40-60° in the same cycle. This program is designed in line with EU eco-design legislation.

NOTE: If changes are made to the functions after the programme has been selected, the temperature and spin speed settings may change; it is recommended to check these settings before starting the machine.

(**)					
Programme	Washing Temperature (˚C)	Maximum Dry Laundry Amount (kg)	Detergent Dispenser	Programme Duration (min.)	Laundry Type / Remarks
Fast 29' 30˚C	30	4	2	29'	The Quick Wash programme helps you save time by cleaning lightly soiled or stain-free black and/or dark-colored laundry in just 29 minutes at temperatures as low as 30˚C. You can quickly wash your lightly soiled or stain-free black or dark-colored laundry at half capacity and conveniently complete your daily laundry routine.
	40	9	2	44'	The Quick Wash programme cleans lightly soiled or stain-free colored laundry in just 44 minutes at temperatures up to 40˚C. Flexible temperature settings ensure effective cleaning for various fabric types, and the machine's ability to wash loads up to its full capacity makes it easy to clean large amounts of laundry.
	"- -C"	4	2	29'	The Quick Wash programme helps you save time by cleaning lightly soiled or stain-free black and/or dark-coloured laundry in just 29 minutes using a cold wash. You can quickly wash your lightly soiled or stain-free black or dark-colored laundry at half capacity and conveniently complete your daily laundry routine.

- The most energy-efficient programs typically have longer cycles at lower temperatures.
- Filling the home washing machine to the capacity specified by the manufacturer for the relevant program helps you save energy and water.
- Program duration, energy consumption, and water consumption may vary depending on the weight and type of laundry, the selected additional functions, tap water, and ambient temperature. In accordance with the EU Ecodesign Regulation, the values provided for programmes other than ECO 40-60 are for reference only.
- It is recommended to use liquid detergent in programmes that wash at low temperatures. The amount of detergent to use may vary depending on the amount of laundry and how dirty it is. Please follow the manufacturer's recommendations regarding the amount of detergent to use.
- The noise level and remaining moisture content are affected by the spin speed. The higher the speed during the spin step, the louder the noise and the lower the residual moisture content.
- You can access the product database containing model information by scanning the QR code on the energy label.

Programme Name	Nominal Capacity, kg	Energy Consumption, kWh/ cycle			Programme Duration, hour: Minute(s)			Water Consumption, Liters/Cycle			Max. Temperature ˚C			Remaining Moisture Content, % 1400 rpm		
		Nominal Capacity	1/2 Load	1/4 Load	Nominal Capacity	1/2 Load	1/4 Load	Nominal Capacity	1/2 Load	1/4 Load	Nominal Capacity	1/2 Load	1/4 Load	Nominal Capacity	1/2 Load	1/4 Load
Cotton 90	9	1,980			02:53			95,0			81			53%		
Cotton 60	9	0,990			01:50			45,0			60			53%		
Eco 40-60	9	0,788	0,273	0,138	03:48	02:54	02:54	60,4	38,9	29,3	40	26	22	53%	53%	53%
Synthetic / Duvet	4	1,070			02:15			70,0			45			53%		
Fast 59' 60˚C	9	1,010			00:59			38,0			54			62%		
20˚C	4	0,060			00:59			28,0			20			53%		


6.1 Important Information

- Make sure the detergent, fabric softener, and other additives you use are suitable for automatic washing machines. If too much detergent is used, excessive foam will form and the automatic foam absorption system will be activated.
- We recommend cleaning your washing machine every three months. For periodic cleaning, please use the Drum Cleaning program. If necessary, use limescale removers specifically designed for washing machines.
- Never force the door open while the washing machine is running. You can open the machine's door 2 minutes after the wash cycle has ended. *
- Never force the door open while the washing machine is running. The door opens immediately after the wash cycle ends. *
- To prevent potential risks, installation and repair works should be performed only by Authorized Service Technicians. The manufacturer assumes no liability for damages resulting from actions taken by unauthorized persons.

(*) The appliance specifications may vary depending on the purchased product.

7. MAINTENANCE AND CLEANING OF YOUR MACHINE

7.1 Warning

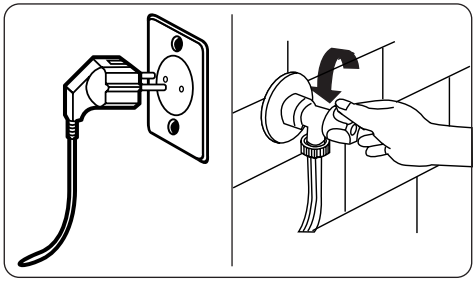

Before starting any cleaning or maintenance work on your machine, you must unplug it.

Before starting cleaning or maintaining your product, you must turn off the water tap.


⚠WARNING: The parts may be damaged if cleaning agents containing solvents are used on your machine.

Do not use cleaning agents containing solvents.

7.2 Water Inlet Filters

There are filters fitted on the tap part and end of water inlet valves to prevent dirt and foreign objects in the water from entering into the washing machine.

If your washing machine cannot be fed adequately though the water tap is turned on, you must clean these filters. (These filters must be cleaned once in 3 months.)

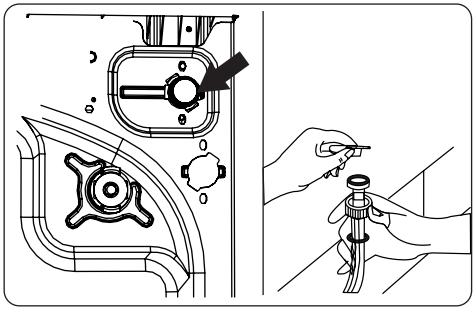

- Remove water inlet hoses.
- Release the filters located on the water inlet valves with a pliers and clean thoroughly under running water and with the help of a brush.
- Clean the filters located on the tap side of the water inlet hoses by removing together with their seals by hand.
- After cleaning the filters, reinstall them in the order you removed them.


⚠WARNING: Due to contaminated tap water or a lack of proper maintenance, the filters in the water inlet valves may become clogged, or the valves may malfunction, causing your machine to continuously take in water. Any malfunctions resulting from these reasons are not covered by the warranty.


7.3 Pump Filter

There is a filter system fitted on your product prolonging service life of the pump in order to prevent thread-like substances and tiny objects from entering into the pump on water discharge after washing. It is recommended that the pump filter is cleaned once in 3 months. To clean the pump filter, take the following steps:

1. To open the pump cover, press the point indicated by the circle in Figure 1 and open the cover in the direction of the arrow, as shown in Figure 2.


NOTE: Before opening the filter cover, place a suitable container in front of the cover to catch any water that may leak out from inside the machine.

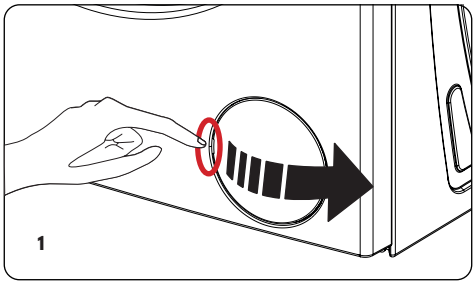

1

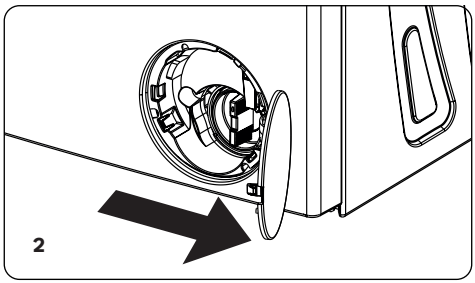
2


2. Loosen the filter cover by turning it counterclockwise, as shown in Figure 3. Next, pull it out in the direction of the arrow shown in Figure 4.

NOTE: Depending on the amount of water inside the machine, you may need to empty the water collection container several times.

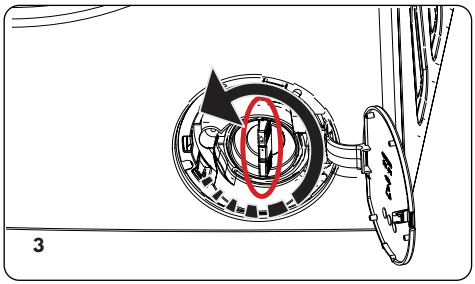

3

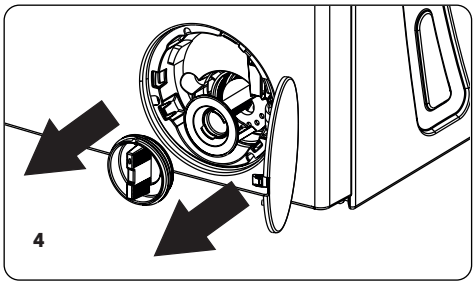
4

3. Clean the foreign objects in the filter with the help of a brush (Figure 5).

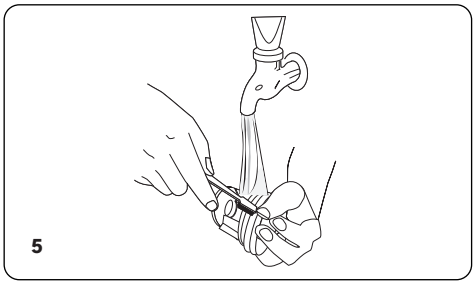
5

4. After cleaning the filter, replace the filter cover and tighten it by turning it clockwise, as shown in Figure 6.

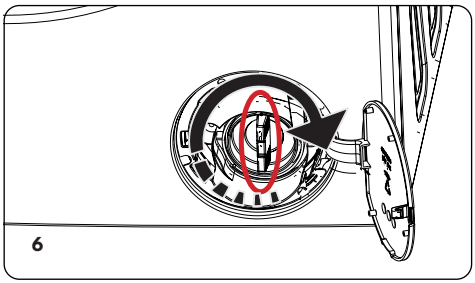
6

5. You can reinstall the pump cover by moving it in the opposite direction of how it was removed.

⚠WARNING: Since the water inside the pump may be hot, wait for it to cool down before starting the cleaning process.

7.4 Detergent Drawer


Your detergents may form deposition on the detergent drawer and drawer detergent slot.

Remove the detergent drawer periodically to clean the formed deposition. It is recommended to be cleaned once in 3 months.


If a mixture of water and fabric softener begins to accumulate in the fabric softener compartment, the siphon should be cleaned.

To remove the detergent drawer from the place:


- Pull the detergent drawer as much as possible.

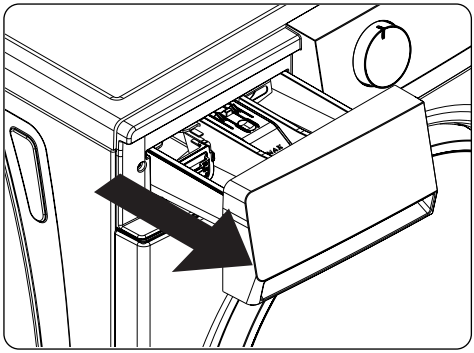

- Press down on the area shown below inside the fully extended detergent drawer, and continue pulling to remove the detergent drawer from its housing.

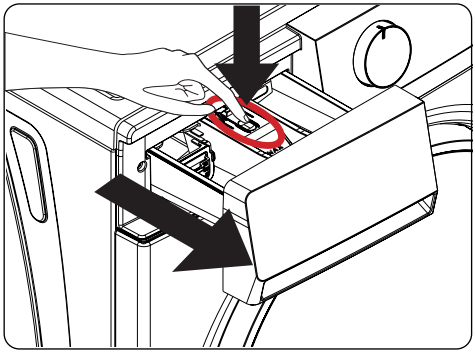

- Remove the cover on the fabric softener compartment by holding it at the front and back and pulling it upward at the same time, as shown in the figure below.

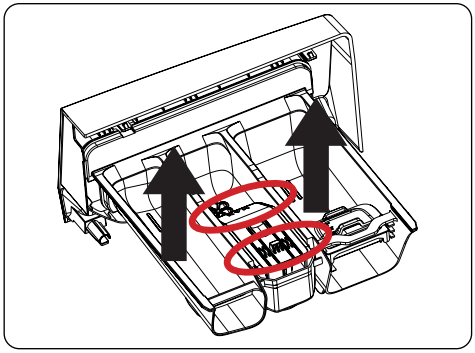


- Wash it with plenty of water and with the help of a brush.
- Clean any residue that has built up in the detergent drawer housing so that residues do not fall into the machine.
- Re-fit the detergent drawer after drying it with a towel or dry cloth.

⚠Do not wash the detergent drawer in dishwasher.

You do not need to remove the liquid detergent level plate to clean it. You can perform the cleaning process by changing its position.

8. BODY / DRUM

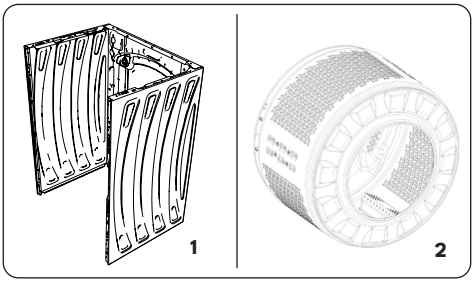

1. Body

Clean the exterior of your machine with warm water and a non-abrasive, non-flammable cleaning agent. After rinsing with some amount of water, dry around with a soft and dry clothe.

2. Drum

Do not leave metal parts such as needle, paper-clip or coin in your machine. Such products cause rust stains inside the drum. Use a non-chlorine cleaning agent to eliminate these rust stains and follow the warning the warnings of the cleaning agent manufacturer. Do not use steel wool or similar rough objects to eliminate rust stains.

9. TROUBLESHOOTING SMALL FAULTS

All repair works required on your washing machine must be performed by the authorised services. When a repair work is needed or if you cannot eliminate the fault with the help of the below information, please consult the closest authorised services.

- Unplug your machine from the power outlet.
- Turn off the water tap.

FAULT	POSSIBLE FAULT	TROUBLESHOOTING METHODS
The machine does not start.	The appliance is not plugged in.	Plug in it.
	Your fuse is malfunctioned.	Change the fuse.
	Power interruption.	Check the power.
	Start/Pause key is not pressed.	Tap Start/Pause key.
	The On / Off button has not been pressed.	Press the on / off button.
	Your machine's door is not closed properly.	Close the door.
The washing machine does not take on water.	The water tap is turned off.	Turn on the tap.
	Water intake hose may have been bent.	Check the water intake hose.
	Water intake hose is clogged.	Clean the filters of the water intake hose. (*)
	Valve inlet filter is clogged.	Clean the valve inlet filters. (*)
	Your machine's door is not closed properly.	Close the door.
The washing machine does not discharge water.	Discharge hose may have been clogged or bent.	Check the discharge hose.
	The pump filter is clogged.	Clean the pump filter. (*)
	The laundry is unbalanced inside the machine.	Distribute the laundry evenly and properly in the machine.
The machine vibrates.	The legs of your machine are not adjusted.	Adjust the machine's legs. (**)
	The safety devices used for transport have not been removed.	Remove the safety assemblies on the appliance. (**)
	There is a little amount of laundry in the appliance.	Does not prevent the machine from operating.
	The machine has been overloaded or the laundry has been distributed unevenly.	Do not load more than the recommended amount of laundry and load the laundry evenly in your machine.
Too much foam formation on the detergent drawer.	Too much detergent has been used.	Tap Start/Pause key. To stop the foam, solve a tablespoon of softener in half a liter of water and pour it into the detergent drawer. 5-10 minutes later, press the Start/Pause key again. Adjust the detergent dose as required on the next washing cycle.
	Wrong type of detergent has been used.	Use detergents intended only for automatic washing machines.

FAULT	POSSIBLE FAULT	TROUBLESHOOTING METHODS
Washing result is not good.	Soiling level of your laundry is not suitable for the selected programme.	Select the appropriate programme according to the soiling level of your laundry. (see programme table)
	Detergent amount that is used is not adequate.	Adjust the amount of detergent according to the amount and soiling level of your laundry.
	Your machine has been overloaded by exceeding the maximum level.	Load your machine without exceeding the maximum capacity.
	The water used may be hard. (Polluted, lime water, etc.)	Use the detergent amount according to the declaration of the detergent manufacturer.
	Distribution of laundry in your washing machine is not balanced.	Distribute the laundry evenly and properly in the appliance.
The water is discharged as soon as filled.	Tip of the water drain hose is way below the machine.	Place the water discharge to a proper height. (**)
No water is visible during washing.	No fault. Water is in unseen part of the drum.	.....
Detergent remains on the laundry.	Insoluble particles of some detergents can stick on your clothes as white stains.	Set your washing machine to "Rinse" programme and perform an extra rinse cycle or clean your garments with the help of a brush after they are dried.
Gray stains on the laundry.	Such stains may be caused by grease, cream or ointment.	Use maximum amount of detergent on the next washing cycle as declared by the detergent manufacturer.
Spin cycle is not carried out or starts late.	No fault. Unbalanced load control system is activated.	Unbalanced load control system will try to distribute your laundry homogeneously. Once your laundry has been distributed, the spinning process will begin. For your next wash, load your laundry evenly into the machine.
The door won't open because of a power outage.	No fault. For your safety, the machine does not allow the door to open immediately during a power outage, as there may be water inside.	Follow the instructions provided in the “Door Emergency Opening Function” subsection of the “Correct Operation” section of the user manual.

(*) Refer to the related chapter for maintenance and cleaning of your appliance.

(**) Refer to the related chapter for the installation of your appliance.

10. AUTOMATIC FAULT WARNINGS AND REQUIRED ACTIONS

Your machine is equipped with the systems to take required measures in case of any malfunction and to warn you through continuously checking itself during washing cycles.

FAULT CODE	POSSIBLE FAULT	REQUIRED ACTION
E01	The machine's door is left open.	Close the door. If your machine is still displaying an error, turn it off, unplug it, and contact your nearest authorized service center immediately.
E02	The water pressure or water level in your machine is low.	Turn the faucet all the way on. The water supply may be shut off; please check. If the problem persists, the machine will stop automatically after a certain amount of time. Unplug your machine, turn off the water supply, and contact an authorized service center.
E03	Pump is malfunctioned or filter is clogged or electrical connection of the pump is faulty.	Clean the pump filter. If the problem persists, contact your nearest authorized service center. (*)
E04	Excessive amount of water in the machine.	The water will be automatically discharged. Switch off and plug out your machine after discharging is done. -Turn off the water tap and call the hotline.

(*) Refer to the related chapter for maintenance and cleaning of your appliance.



www.kernau.com



KERNAU

kontakt@gtpoland.eu

Serwis Kernau
PL: +48 22 243 70 00
Pn 8:00 - 17:00
Wt-Pt 8:00 - 16:00
serwis@kernau.com