
CERA+

PORTABLE COFFEE MACHINE PRO VERSION


USER GUIDE


EN – Portable Coffee Machine, PRO Version	User Guide
DE – Tragbare Italienische professionelle Kaffeemaschine	Bedienungsanleitung
FR – Machine à café professionnelle italienne portable	Notice d'utilisation
IT – Macchina da caffè professionale italiana portatile	Manuale di istruzioni.
ES – Cafetera profesional italiana portátil	Manual de instrucciones.

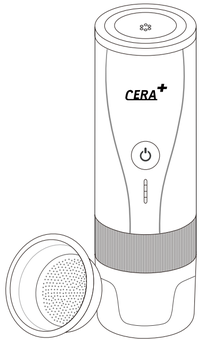

Product structure

DE Produktkomponenten
IT Componenti del prodotto
FR Composants de produit
ES Componentes del producto

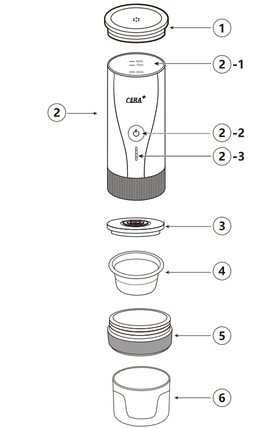

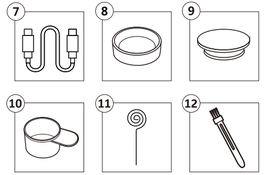

CERA+ EN

① Lid
② Main Body
②-1 Water Tank
②-2 Switch
②-3 Indicator
③ Shower Screen
④ Φ51 Filter Basket
⑤ Portafilter
⑥ Cup
⑦ Type C Cable
⑧ Doser
⑨ Tamper
⑩ Spoon
⑪ Distribution Tool
⑫ Brush

Diameter:

Portable coffee machine, Pro version	
Style	Pro Version
Model No.	PCM04A
N.W.	705g
Water Tank Material	SS18/8
Water Capacity	Max. 80mL
Filter Capacity	20g
Max. Pressure	20bar
Battery	7500mAh
Heating Power	90W
Extraction Power	5W
Charging Power	5V/2A.3A
Charging Time	3~3.5H
Extraction Temperature	92℃ / 198℉
Heating Function	YES

Attention:

Please read all the points below and keep the manual well.

- Keep the maker out of reach of children,do not hand over the machine to the person who does not know how to use and never read the manual.
- This machine is for personal use only.
- Check the machine to see if it is in good condition and all the parts are well allocated after unboxed.
- Check the machine before use, do not use if it is damaged.
- Keep the packing bag and accessories out of reach of children.
- Please use the machine carefully when there are children nearby.
- Do not expose the machine to fire,direct sunlight or high temperature.
- Do not hold the machine in the stove,oven,micro-wave oven or dish washer.
- Use mineral or purified water.
- When in use, tighten the locking chamber to avoid leakage.
- Do not fix or replace parts personally.

Storage:

•Do not expose the machine to fire, direct sunlight or high temperature

•Do not stay in the car under the straight sunshine

•Store the machine in a cool, dry place

Important Notice:

Attention, there might be risk of scald for improper use


When you are operating in heating water, please ensure the machine is stable, to avoid the risk of splashing and scald.

Please keep the lid closed when in extraction to avoid scald.

After use, please wait a few minutes and take out the used powder to avoid scald.


Please make sure there is water in the water tank before each use. Do not use the machine without filling water, as it might damage the machine.

Charging:

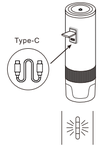

* Use adapter over 10W for charging
The adapter should support 5V output.
(It takes much longer charging time if you use 5W or below 10W adapter)

* Use Type-C cable for charging, when connecting the cable,indicator lights will be on according to the power status. Whenfully charged, lights are constant on and then off in one minute.

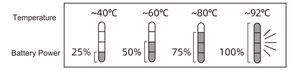

Usage Instruction:

* Please check the power status before first use.
(Slightly press once to indicate the power)
* Clean the machine before first use.
(See "How to Clean")

Operation:

1.



Check the battery power first, slightly press the switch once to indicate the power status

When charging, lights are flashing. When fully charged, lights are constant on and then off in 1 minute.

2.



Take out the accessories

3.



Combine the loading ground coffee group

4.



Add 18-20g ground coffee to filter basket, then use distribution needle to stir the powder.

5.



Rotate the tamper until the powder is horizontal, then press the tamper to compact the powder.

6.

Tighten Hard!



Tighten the locking chamber into machine (it may fail to extract or leak if not tighten well)

7.1 Open the lid, fill in water, and close the lid. (do not exceed the max. capacity limit)



A: Add hot water to direct brew:
Quick double press the switch and start extraction.The machine will be in pre soaking status, after 10 seconds, extraction continues.
(During extraction, press switch once to stop extraction)

7.2



B. Cool water heating and extraction:
Press and hold the switch for 2 seconds, machine beeps once, then start heating. After 3-4 minutes, machine is beeping, then finish heating.
Quick double press the switch, and start extraction.The machine will be in pre soaking status, after 10 seconds, extraction continues.
(During extraction, press switch once to stop extraction)

How to Clean:

- After each use, take out the used powder.
- Switch on the machine without adding ground coffee: fill in water, quick double press the switch and start extraction.Repeat the operation can clean the machine interior.
- There might be water remain in the tank, clear and clean it.
- Use wiper to clean the machine's appearance ②,do not put it in the water or dishwasher.
- All the accessories can be washed by hand or dishwasher.
- Do not use detergent.
- It is recommended to clean the machine everyday.

Environmental Protection:

Do not dispose the electrical equipment in the trash!

Electrical equipmentis not allowed in dispose in family's trash. According to European Directive 2021/19/EU on waste electrical and electronic equipment and its implementation in nationallaw. It is necessary to collect specially and deal with it in a dedicated recycling center under the respect of environment.Learn about local special collecting facilities where electrical and electronic equipment marked with this symbol.

Li-ION

Do not dispose the batteries in household waste!

Damaged or defective batteries must be dealt with separately,and recycled in a environmental way.

Thank you for buying (CERA+) portable espresso maker
Please read the manual carefully before use and keep it well

Please feel free to contact us at : support@ceraplus.net
Thank you for your trust and support in our product.

LUCKYMAN TECHNOLOGY CO.,LTD.
Add: 2-3F, Building 3, No.611, Huawei Rd., Zhuhai,Guangdong, China 519075
Tel: +86 756 3353269 Fax:+86 756 3377201
https://ceraplus.net https://www.luckychina.net

MADE IN CHINA